



BATmode 2S / 2S+

USER MANUAL

GENERAL INFORMATION ON THIS USER MANUAL

This manual belongs to the system BATmode 2S and BATmode 2S+. If instructions belong to both versions, the version naming is omitted hereinafter. Please read these instructions completely and carefully before taking the device into operation, it contains important instructions on commissioning, handling and operation. The safety instructions contained within must be observed!

SYMBOLS

Important notes for the users and operators of the BATmode system are mark with the following signs:



Attention!

Instructions marked with this sign have to be complied. Neglecting any of these instructions may harm persons or cause damage to system parts.



Important!

Advices marked with this sign concerns the correct usage of the system. Neglecting any of these advices may cause malfunction of the system.

WASTE DISPOSAL

European Union:

Do not dispose parts or the whole BATmode system at public or community supplied disposal systems. According to the European WEEE Directive 2002/96/EC on Waste of Electronic and Electrical Equipment we take our devices back for recycling or proper disposal. Send them to bat bioacoustictechnology. This service is free of charge.

Other countries:

We would like to encourage you to send us back defective devices for recycling or proper disposal. This service is free.

SAFETY INSTRUCTIONS



- Only use power supplies authorized or supplied by bat bioacoustictechnology.
- Avoid excessive mechanic strain on the BATmode system, especially on plugs and connectors if cables are connected to the BATmode or the antenna and microphone disc. Strong vibrations, shaking or dropping may damage system parts.
- Ensure a safe and stable mounting of the BATmode and the corresponding discs. Dropping can harm persons, property or the BATmode system.
- Ensure that nobody can stumble on installed and connected wires. Stumbling can harm persons and damage system parts.
- Only use accessories supplied or authorized by bat bioacoustictechnology. The use of unauthorized accessories may damage the device.
- Please contact our support if the BATmode system shows any damage or does not work properly. Do not open system parts and try to repair damage by yourself or through unauthorized personnel. This will cause the loss of warranty.

APPLICATION NOTES



- Microphone capsules of microphone discs and tower microphones are sensitive to mechanical strain. Do not touch the microphone capsules with fingers or objects and never use stickers or any adhesives on its surface.
- Avoid the pollution of the microphone capsules by dust or dirt particles. This can clog the protective grid and/or damage the microphone.
- Try not to expose the running BATmode system to electromagnetic fields. Since the microphone is sensitive to those fields, interferences with the audio signal are possible.
- Ensure a sufficient air circulation around the BATmode. Overheating can cause data loss and/or damage to the BATmode.
- Avoid interrupting power supply while the system is running. This can cause system failure and/or data loss.
- Do not twist or bend wires, since this can damage them.
- Do not use tools (nipper, wrench ...) for fixation of cable connections since this can damage the connectors and/or the wires.
- The splash-proof discs protect electronic components against rain. Nevertheless, the microphone has to be exposed to detect incoming sound waves. Indeed, the protective grid is a relatively good protection against rain, but long lasting exposure to high humidity lead to corrosion and loss of sensitivity. Consequently, avoid exposing the discs to high humidity.
- Do not expose the BATmode to any kind of humidity. Penetration of moisture can cause damage due to corrosion and short-circuiting.
- Avoid fast temperature variations and temperature below 0°C and above 40°C.
- For further questions, contact the support of bat bioacoustic technology.

SOFTWARE LICENSE AGREEMENT FOR BATCONTROL

1. GENERAL

This Software License Agreement for BATcontrol (hereinafter this Agreement) is a legal agreement between you i.e., the end user or customer (either an individual or a legal entity) and bat bioacoustictechnology GmbH (hereinafter bat bioacoustictechnology). The copyright of this software (hereinafter the Software) and its associated documentation (including any files, images, text incorporated into the Software) as well as any accompanying written materials is owned by bat bioacoustictechnology (the Owner), located at Hohe Strasse 2, 90610 Winkelhaid, Germany, and is protected by German copyright laws and international treaties.

By installing, copying, downloading or otherwise using this Software, you agree with the Owner to be bound by the terms and conditions of this Agreement, which will govern your use of the Software. You also agree then to bat bioacoustictechnology standard business conditions. If you do not agree to this Agreement, do not install or use this Software. Any offence against this Agreement will be prosecuted to the fullest extent of the law. You will be held responsible for any employees or users who receive the Software and in turn make unauthorized copies.

Customers should carefully read the following terms and conditions before using the Software.

2. LICENSE

bat bioacoustictechnology grants, and the customer accepts, a nontransferable and nonexclusive license to use the Software on the following terms and conditions:

You may copy the software to another disk or media, for the purpose of backup protection only in the event of a system wide crash. Please be aware, that the Software runs only on BATmode S and BATmode S+ Systems. Installation and the use of the Software onto a BATmode S or S+ means that you have accepted and agreed to the terms that govern the use of copyrighted software.

You are not permitted to:

- a) pass copies of this software.
- b) make copies of or distribute any parts of the Software.
- c) rent, lease, sub-license, loan, copy, modify, alter, adapt, merge, translate, reverse engineer, decompile, or re-package the Software into another product, or to disassemble it or create derivative works, based on the whole, or any part, of the Software or its associated documentation.
- d) copy the Software for the purpose of illegal distribution or loading onto systems owned by another individual or company.

3. TERM

This Agreement is effective until you terminate it by destroying the Software and its documentation, together with all copies. This agreement will also terminate if you fail to abide by its terms. Upon termination, you agree to destroy all copies of the Software, and its documentation, including any Software stored on the hard disk of any server/computer under your control.

4. OWNERSHIP

The Software is licensed to you. You do not own it. The Owner shall at all times retain ownership of the Software as well as all subsequent copies thereof, regardless of form or storage medium. The owner also retains the title, and all proprietary rights to the Software, including, but not limited to, all patent, copyright, trade secret, service marks, registered service marks, trademark or registered trademark rights.

You agree to protect the confidentiality of the Software, the documentation as well as any accompanying written materials.

You agree that you will not provide a copy of the Software or documentation or any accompanying written materials nor divulge any proprietary information of bat bioacoustictechnology to any person, other than your employees, without the prior consent of bat bioacoustictechnology. You shall use the best efforts to see that any user of the Software licensed hereunder complies with all provisions and prohibitions this Agreement.

5. DISCLAIMER OF WARRANTY

THE OWNER DOES NOT GUARANTEE THE FOLLOWING: THAT THE SOFTWARE WILL BE FREE FROM BUGS, ERRORS, OR OMISSIONS, THAT IT WILL PERFORM WITHOUT INTERRUPTION, THAT THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED, OR THAT NEW RELEASES AND/OR UPGRADES OF THE SOFTWARE WILL BE PROVIDED. THE SOFTWARE, ANY INFORMATION, CODES, AND/OR EXECUTABLES PROVIDED, IS SUPPLIED AS IS, WITHOUT WARRANTY OF ANY KIND. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE OWNER FURTHER DISCLAIMS ALL WARRANTIES EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. THE RECIPIENT ACCEPTS ANY AND ALL RISK ASSOCIATED WITH THE USE OR PERFORMANCE OF THE SOFTWARE AND DOCUMENTATION. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE OWNER SHALL NOT BE LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, DIRECT, INDIRECT, OR INCIDENTAL LOSS OF BUSINESS PROFITS, SPECIAL DAMAGES ARISING FROM THE USE (OR INABILITY TO USE) THE SOFTWARE, OR FROM ERRORS OR DEFICIENCIES IN IT, WHETHER CAUSED BY NEGLIGENCE OR OTHERWISE, EVEN IF THE OWNER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE OWNER'S LIABILITY EXCEED THE AMOUNT PAID BY YOU FOR THE SOFTWARE. INDISPENSABLE CLAIMS FOR PRODUCT LIABILITY BY LAW REMAIN UNAFFECTED.

BECAUSE SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO RECIPIENT.

6. GRAPHICS

Icons in parts by Lokas Software (<http://www.awicons.com>).

7. LAW

This Agreement shall be governed by German laws and regulations and international treaties. Legal venue shall be Winkelhaid, Germany. This license based upon laws of the federal republic of Germany. If any part of this license should be declared antinomian by a court with competent jurisprudence the remaining parts keep their validity anyway.

01/2019, Thomas Scharrer Softwaredevelopment / bat bioacoustictechnology GmbH

<http://www.bioacoustictechnology.de>



CONTENT

1	SCOPE OF DELIVERY.....	1
2	DEVICE DESCRIPTION	3
2.1	BATmode 2S/2S+ Main Detector Unit.....	3
2.1.1	On-/Off-Switch	4
2.1.2	Power LED.....	4
2.1.3	Status LED.....	4
2.1.4	Mobil Service LED	5
2.1.5	WIFI-Hotspot LED	5
2.1.6	UltraSoundGates Status LEDs.....	5
2.1.7	SIM-Card Slot.....	5
2.1.8	Temperature Sensor Connector (exclusively BATmode 2S+).....	6
2.1.9	Precipitation Sensor Connector (exclusively BATmode 2S+)	6
2.1.10	Heating Output Connector	7
2.1.11	Power Supply Connector	7
2.2	Cellular Antenna with Magnetic Base (exclusively BATmode 2S)	8
2.3	Antenna Disc (exclusively BATmode 2S+)	8
2.4	Microphone Disc GM50 (optionally)	9
2.5	Microphone Disc GM90 (optionally)	9
2.6	Tower Microphone TM10 without Reference Signal Speaker	10
2.7	Tower Microphone TM20 with Reference Signal Speaker.....	10
2.8	UltraSoundGate of Avisoft Bioacoustics (optionally)	11
2.8.1	XLR-Input Connector	12
2.9	4 Port USB Hub EX-1163HM from Exsys (optionally)	12
3	START-UP.....	13
3.1	Installation.....	13
3.1.1	BATmode 2S and BATmode 2S+ Main Detector Unit.....	13
3.1.2	UltraSoundGate 116Hnbm (optional)	13
3.1.3	UltraSoundGate 416Hnbm (optionally).....	14
3.1.4	Cellular Antenna with Magnetic Base (exclusively BATmode 2S)	14
3.1.5	Antenna Disc (exclusively BATmode 2S+)	14
3.1.6	Microphone Disc GM50/GM90 (optionally).....	15
3.1.7	Tower Microphones TM10 and TM20 (optionally)	15

3.1.8	USB Hub (optionally)	16
3.1.9	USB power plug (optionally).....	16
3.2	Connecting.....	17
3.2.1	When measuring at one or two measuring points with an UltraSoundGate 116Hnbm	17
3.2.2	When measuring at more than two measuring points with UltraSoundGates 116Hnbm	18
3.2.3	When measuring at multiple measuring points with an UltraSoundGate 416Hnbm ...	19
3.3	First Start-Up	21
3.4	Remote access to the BATmode System	22
3.4.1	Remote Access via WIFI Connection	22
3.4.2	Remote Access via LAN Connection	23
3.4.3	Remote access via Cellular Data Connection	24
4	BATCONTROL SOFTWARE.....	25
4.1	Structure.....	25
4.1.1	Status Bar	25
4.1.2	Task Bar	26
4.1.3	Pages.....	26
4.1.4	Start-/Stopp-Button.....	26
4.1.5	Message Bar	26
4.2	Operation	27
4.2.1	Page: Welcome.....	27
4.2.2	Page: Connectivity.....	29
4.2.3	Page: Monitoring.....	35
4.2.4	Page: Evaluation	42
5	TECHNICAL DATA.....	46
5.1	BATmode 2S/2S+.....	46
5.1.1	Power supply	46
5.1.2	Heating output	46
5.1.3	SIM card slot.....	46
5.1.4	Temperature sensor input (exclusively BATmode 2S+)	46
5.1.5	Precipitation sensor input (exclusively BATmode 2S+).....	46
5.1.6	Operation temperature:.....	46
5.2	Cellular antenna with magnetic base (exclusively BATmode 2S).....	46

5.3	Antenna disc (exclusively BATmode 2S+).....	46
5.3.1	WIFI antenna	46
5.3.2	Cellular antenna	46
5.3.3	Temperature Sensor.....	47
5.4	UltraSoundGate 116Hnbm or 416Hnbm Avisoft Bioacoustics (optionally)	47
5.5	Microphone disc GM50 (optionally)	47
5.5.1	Microphone	47
5.5.2	Testsignal Speaker.....	47
5.6	Microphone disc GM90 (optionally)	47
5.6.1	Heating unit.....	47
5.6.2	Microphone	47
5.6.3	Testsignal Speaker.....	47
5.7	Tower Microphone TM10 (optionally)	48
5.8	Tower Microphone TM20 (optionally)	48
5.8.1	Microphone.....	48
5.8.2	Testsignal Speaker.....	48

1 SCOPE OF DELIVERY

The scope of delivery of BATmode systems varies depending on the configuration requested by the customer. A system can be used for up to four measuring points simultaneously.

BATmode 2S system:

- BATmode 2S main detector unit
- 1 - 4 UltraSoundGates 116Hnbm or one UltraSoundGate 416Hnbm of Avisoft Bioacoustics (optionally)
- 1 - 4 Microphone discs or tower microphones (optionally)
- 4 port USB hub (optionally)
- Cellular antenna with magnetic base
- Power supply (power connector cable + power supply unit or single power plug)
- 1 - 5 USB cables (optionally)
- Power supply for USB hub (Chinch <-> Clamp 2 pin) (optionally)
- 1 - 4 microphone cables (XLR: 5 pin <-> 5 pin) (optionally)
- Heating cable (Chinch <-> XLR: 2 pin <-> 3 pin) (optionally)
- or*
- 1 - 4 USB heating cables (USB <-> XLR: 3pin) with USB power plugs (optionally)
- VESA mounting kit
- Transportation case
- Quickstart Guide
- Microphone Calibration Certificates (optionally)

BATmode 2S+ system:

- BATmode 2S+ main detector unit
 - 1 - 4 UltraSoundGates 116Hnbm or one UltraSoundGate 416Hnbm of Avisoft Bioacoustics (optionally)
 - 1 - 4 Microphone discs or tower microphones (optionally)
 - 4 port USB hub (optionally)
 - Antenna disc
 - Power supply (power connector cable + power supply unit or single power plug)
 - 1 - 4 microphone cables (XLR: 5 pin <-> 5 pin) (optionally)
 - Heating cable (Chinch <-> XLR: 2 pin <-> 3 pin) (optionally)
- or*
- 1 - 4 USB heating cables (USB <-> XLR: 3pin) with USB power plugs (optionally)
 - 2 antenna cables (RP-SMA <-> RP-SMA)
 - Cable for temperature sensor (mini XLR: 3 pin <-> 3 pin)
 - VESA mounting kit
 - Transportation case
 - Quickstart Guide
 - Microphone Calibration Certificates (optionally)

2 DEVICE DESCRIPTION

2.1 BATmode 2S/2S+ Main Detector Unit

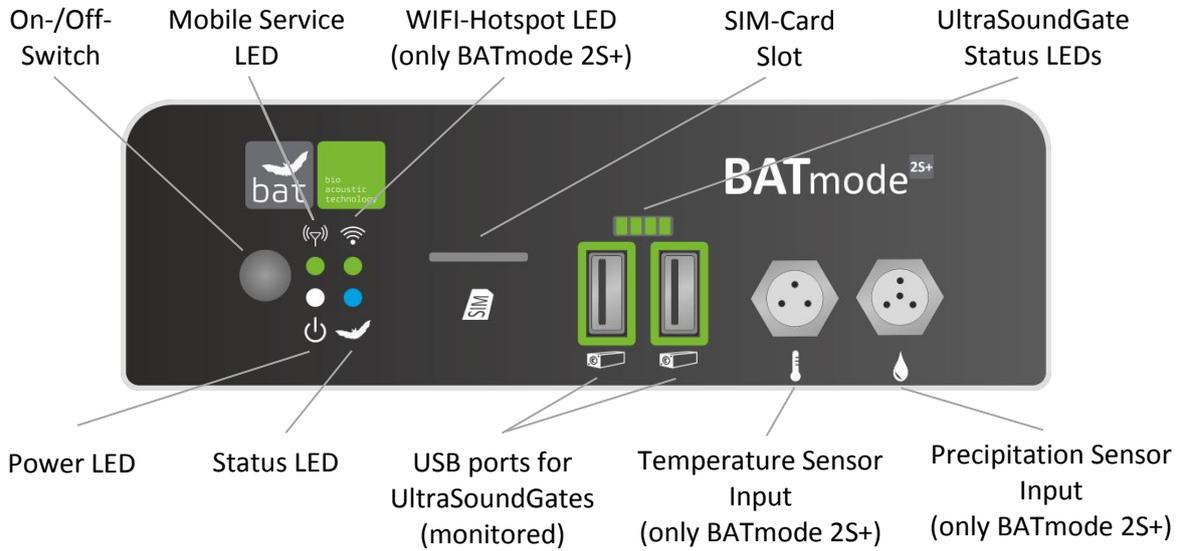


Figure 1: BATmode 2S/2S+ Front Panel

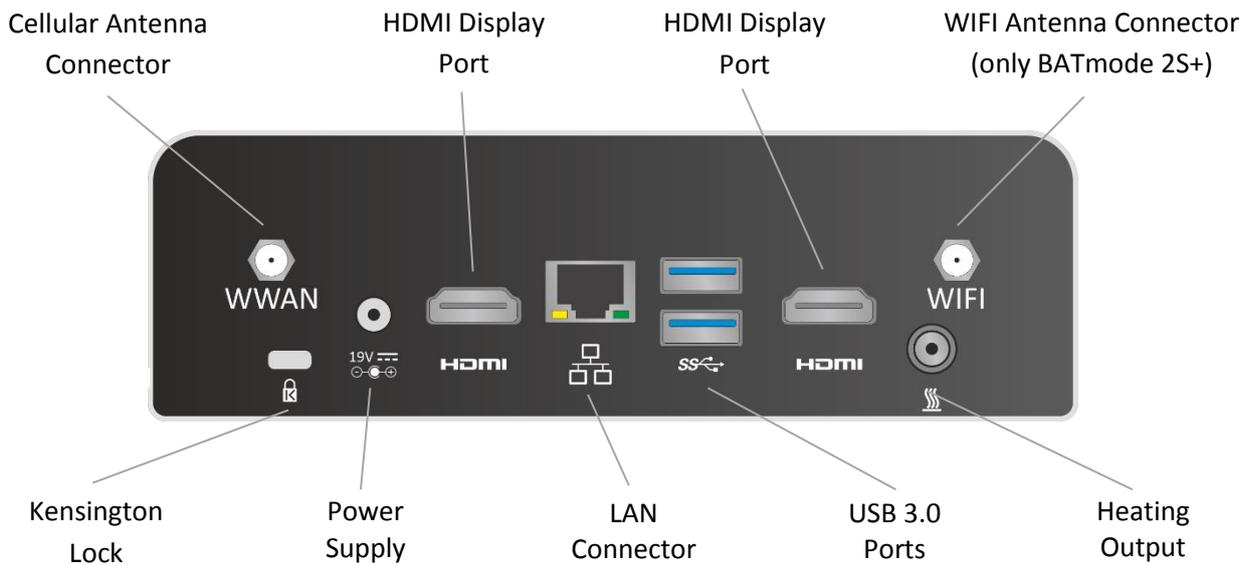


Figure 2: BATmode 2S/2S+ Back Panel

2.1.1 On-/Off-Switch

The On-/Off-Switch allows to switch the system on or off. Table 1 lists all possible system states in dependency of the duration the switch is pressed.

Table 1: System state in dependency of the duration the on-/off-switch is pressed

If the system is in the following state...	... and the On-/Off-switch is pressed for...	...the system changes to the following state
Off	less than four seconds	On
On	less than four seconds	Shutdown
On	more than six seconds	Off

In case of power failure, the BATmode system will restart automatically when power returns.

2.1.2 Power LED

The white Power LED shows the state of the BATmode. Table 2 depicts all possible states of the Power LED.

Table 2: States of the Power LED

LED state	Description
Off	Device off
Continuously on	Device on

2.1.3 Status LED

The blue-red Status LED shows the monitoring state. Table 3 depicts all possible states of the Status LED.

Table 3: States of the Status LED

LED state	Description
Off	BATcontrol software not started
Blue	BATcontrol software started, monitoring off
Blue blinking	BATcontrol software started, monitoring on
Blue-red blinking	Monitoring start not possible – Please check calibration and UltraSoundGates

2.1.4 Mobil Service LED

The green Mobile Service LED shows the state of the mobile connection. Table 4 depicts all possible states of the Mobile Service LED.

Table 4: States of the Mobile Service LED

LED state	Description
Double blinking	No SIM inserted or no mobile service connection
Single blinking	Registered to mobile network
Continuously on	Mobile connection connected

2.1.5 WIFI-Hotspot LED

The green-red WIFI-Hotspot LED shows the state of the WIFI-Hotspot. Table 5 depicts all possible states of the WIFI-Hotspot LED.

Table 5: States of the WIFI-Hotspot LED

LED state	Description
Off	WIFI-Hotspot off
Green	WIFI-Hotspot on
Red	Error - Please check WIFI settings in Windows

2.1.6 UltraSoundGates Status LEDs

The green UltraSoundGate Status LEDs show the number of connected UltraSoundGates and therefore also the number of available microphone channels.

2.1.7 SIM-Card Slot

To establish a cellular data connection and to send and receive SMS a SIM card (Mini-SIM, also often called Classic-SIM or Standard-SIM) with an adequate SMS and data plan is required. The SIM card has to be inserted into the SIM card slot as depicted on the device and in figure 1.



Basically, bat bioacoustic technology recommends the use of PIN free SIM cards, because only an inactivated PIN allows to unlock the SIM card after a reboot of the system automatically.

2.1.8 Temperature Sensor Connector (exclusively BATmode 2S+)

To acquire temperature data a temperature sensor can be connected to the BATmode 2S+ - System via a mini-XLR connector (see Table 6). The BATmode 2S+ is specified for the temperature sensor integrated in the system's antenna disc. The corresponding pin connection is presented in Table 6.

Table 6: Pin connection of the temperature sensor connector

Pin-Number	Description
1	Ground
2	Sensor output
3	Power supply



Do not use unauthorized temperature sensors und connection wires, since this can cause system failure, damage and the loss of data.

2.1.9 Precipitation Sensor Connector (exclusively BATmode 2S+)

To acquire precipitation data a precipitation sensor can be connected to the BATmode 2S+ - System via a mini-XLR connector (see Table 7). The BATmode 2S+ is specified for the "Precipitation sensor" manufactured by Adolf Thies GmbH & Co. KG. It can be purchased including a suiting connection cable from bat bioacoustictechnology. The corresponding pin connection is presented in Table 7.

Table 7: Pin connection of the precipitation sensor connector

Pin-Number	Description
1	Ground
2	Sensor output -
3	Not connected
4	Sensor output +



Do not use unauthorized precipitation sensors und connection wires, since this can cause system failure, damage and the loss of data.

2.1.10 Heating Output Connector

The BATmode can supply a microphone heating integrated in the microphone disc of bat bioacoustic technology. The corresponding pin connection is presented in Table 8.

Table 8: Pin connection of the heating output connector

PIN	Description
Shell	Ground
Inner contact	12 - 19V DC

If the BATmode system is used for a simultaneous data acquisition at several measuring points, the heating output can also be used to supply power to a USB hub. In this case, the heating of the microphone discs is supplied with the USB heating cables.



Please note that microphone discs with a heating connection marked with "5V" have to be operated only via USB heating cables and not via the heating output of the BATmode. Violation may result in the destruction of the microphone heater and equipment failure and damage, as well as data loss.



Do not use the heating output to supply microphone heating units or USB hubs of other manufactures than bat bioacoustic technology. The use of unauthorized microphone discs, USB hubs and connection wires can cause system failure, damage and the loss of data.

2.1.11 Power Supply Connector

The BATmode can be powered through a 12-19 V DC connector on the back panel (see figure 2). The back panel DC connector is compatible with a 5.5 mm/OD (outer diameter) and 2.5 mm/ID (inner diameter) plug, where the inner contact is +12-19 ($\pm 10\%$) V DC and the shell is GND. The maximum current rating is 10 A.



Use only power supplies of bat bioacoustic technology to power the BATmode. The use of unauthorized power supplies und connection wires can cause system failure, damage and the loss of data.

2.2 Cellular Antenna with Magnetic Base (exclusively BATmode 2S)

Quadband antenna for cellular network connection of the BATmode 2S.

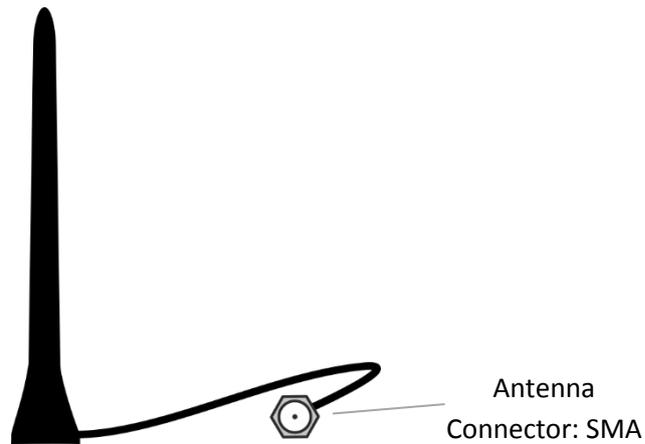


Figure 3: Cellular Antenna with Magnetic Base

2.3 Antenna Disc (exclusively BATmode 2S+)

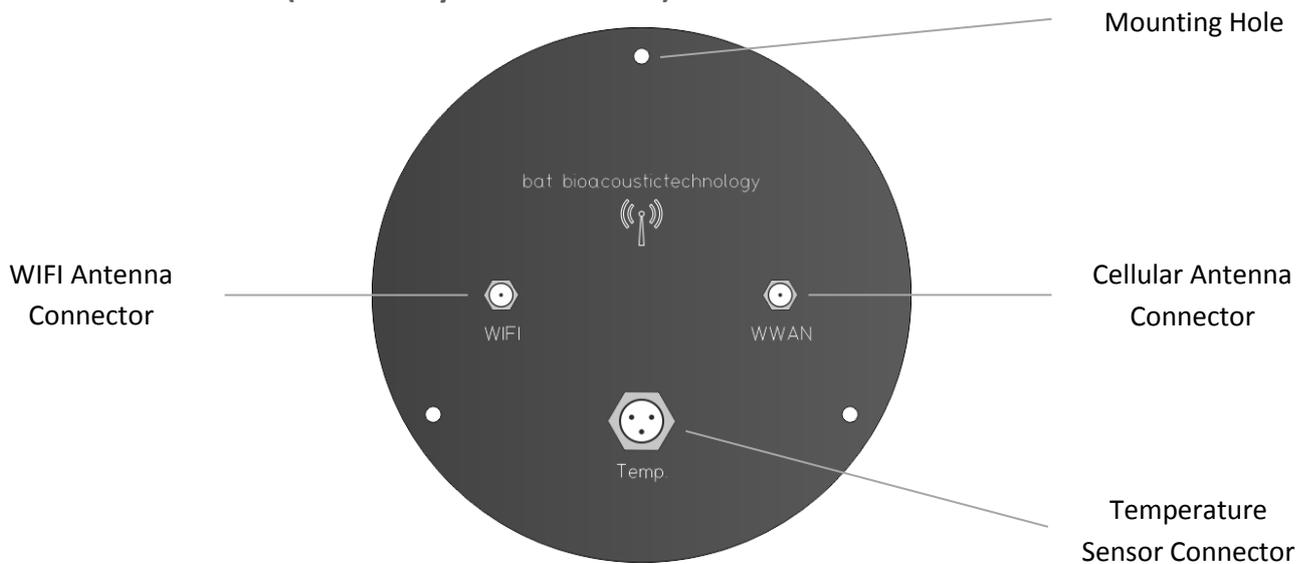


Figure 4: Antenna Disc

The Antenna Disc contains a directional WIFI antenna. Since the direction of the strongest signal is directed into the paper plane, the disc has to be installed with the illustrated connector side turned away from a potential connection partner.

2.4 Microphone Disc GM50 (optionally)

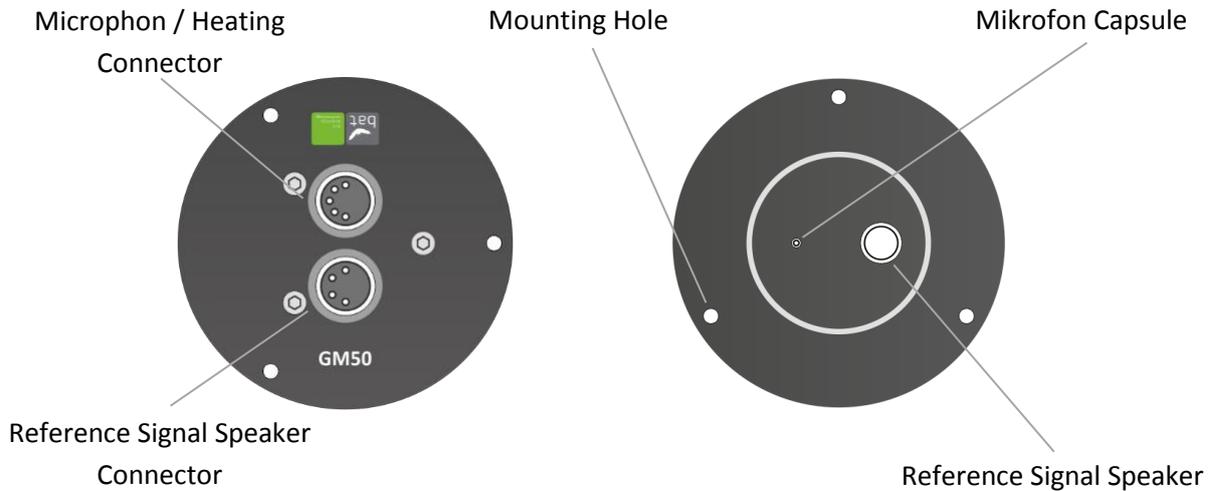


Figure 5: Front and Back View Microphone Disc GM50

The Microphone Disc GM50 can either be used with the enclosed mounting plate or with an optional tripod. Nevertheless, calibration of the GM50 is executed with mounted mounting plate.

To connect the microphone and the reference signal speaker of the GM50 please use the Y-XLR microphone cable.

2.5 Microphone Disc GM90 (optionally)

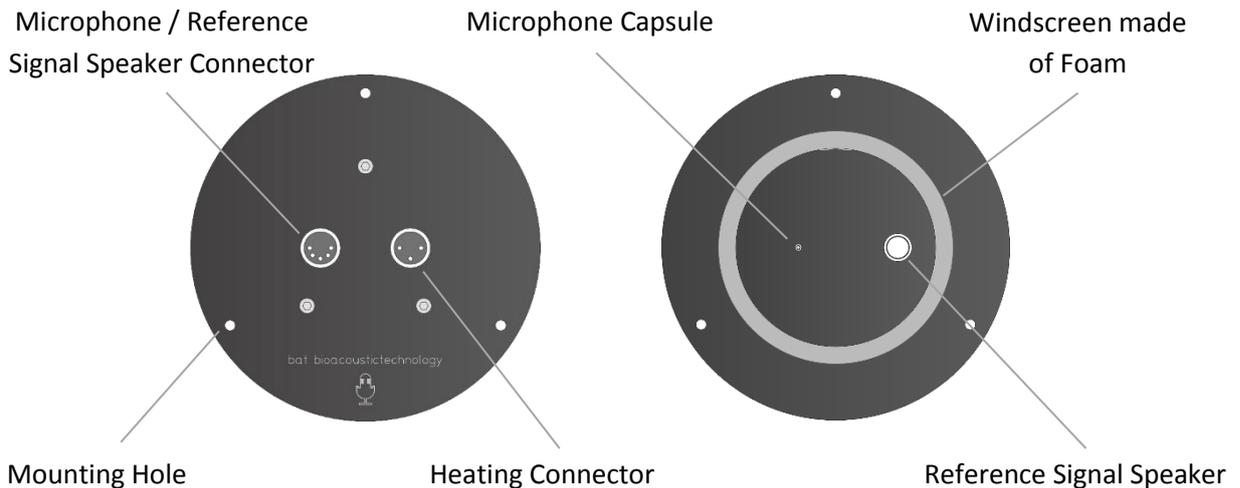


Figure 6: Front and Back View Microphone Disc GM90

Do not remove the windscreen foam, as this has an essential influence on the calibration of your microphone disc.



Please note that microphone discs GM90 with a heating connection marked with "5V" have to be operated only via USB heating cables and not via the heating output of the BATmode. Violation may result in the destruction of the microphone heater and equipment failure and damage, as well as data loss.

2.6 Tower Microphone TM10 without Reference Signal Speaker

The tower microphone TM10 has a diameter of 10mm and a length of 500mm. It can be fixed at any depth from 10 to 450mm with the help of an optional magnetic base that can be moved along the microphone.

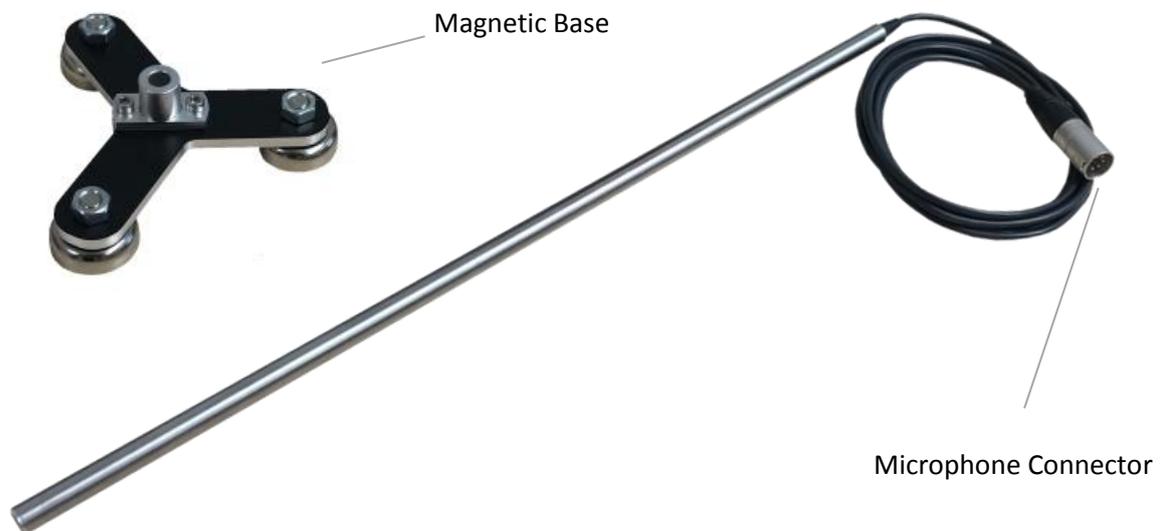


Figure 7: Tower Microphone TM10 with Magnetic Base

2.7 Tower Microphone TM20 with Reference Signal Speaker

The tower microphone TM20 has a diameter of 20mm and a length of 60mm. For mounting, it has on its back a M3 threaded hole. With the help of an optional mounting rod (length 400mm) and a magnetic base, which can be moved along the mounting rod, it can be fixed in any depth from 70 to 450mm.

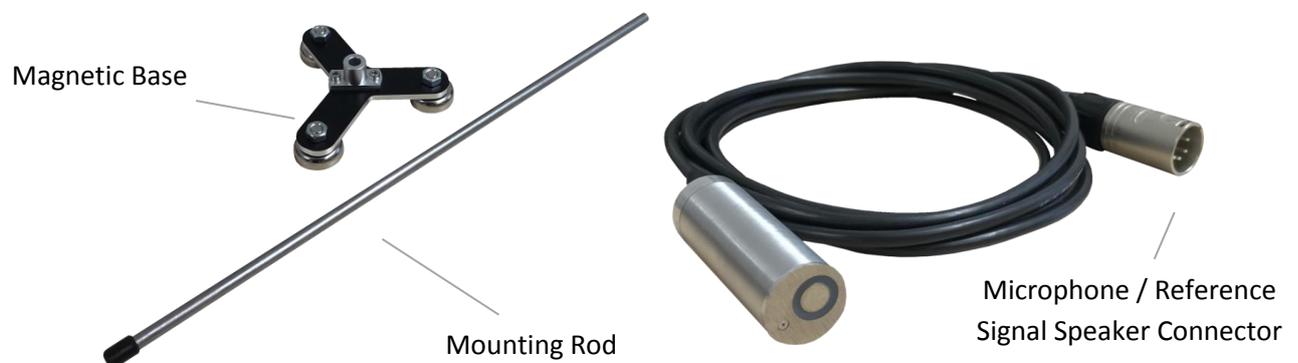


Figure 8: Tower Microphone TM20 with Mounting Rod and Magnetic Base

2.8 UltraSoundGate of Avisoft Bioacoustics (optionally)

The BATmode system can be used with either up to four single-channel UltraSoundGates 116Hnbm or a four-channel UltraSoundGate 416Hnbm from Avisoft Bioacoustics to record high quality acoustic data from bat calls. For more information, please read the instruction manuals of the two UltraSoundGates 116Hnbm and 416Hnbm, which can be downloaded from www.avisoft.com.

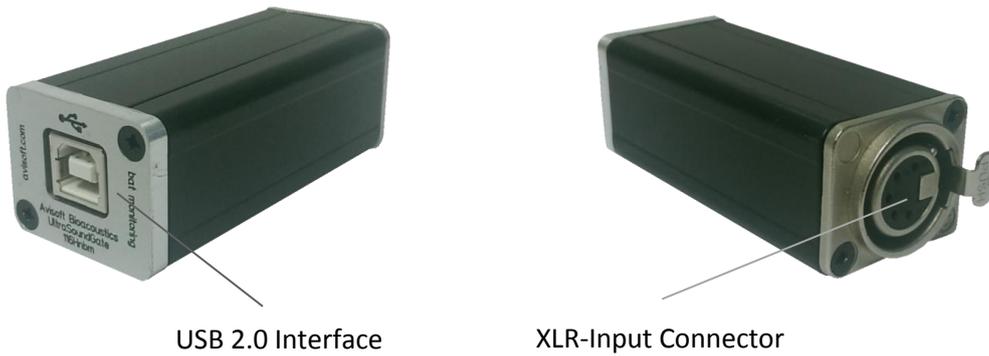


Figure 9: UltraSoundGate 116Hnbm




Figure 10: UltraSoundGate 416Hnbm

2.8.1 XLR-Input Connector

The 5-pin XLR-Input connectors represents the analog inputs of the recording devices UltraSoundGate 116Hnbm as well as 416Hnbm and provide power supply voltages for external preamplifiers and microphones. The connector scheme is listed in Table 9.

Table 9: Pin connection of the XLR-input connectors

Pin-Number	Description
1	Ground
2	Positive input
3	Negative input
4	+5 V supply voltage (max. current 20 mA)
5	TRG input/output

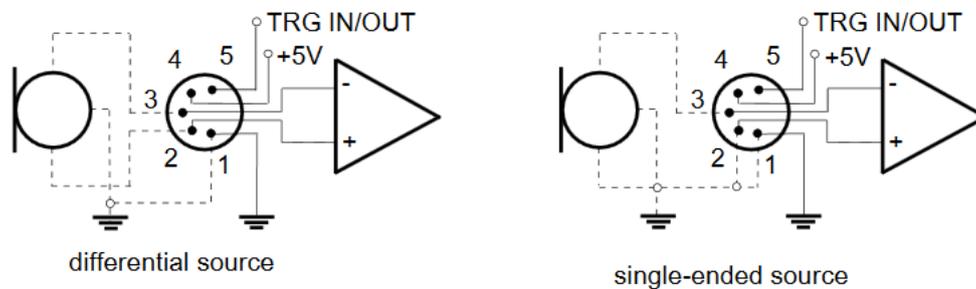

2.9 4 Port USB Hub EX-1163HM from Exsys (optionally)

The 4 port USB hub is used to connect several UltraSoundGates 116Hnbm to the BATmode system. This allows to record acoustic data at several measuring points simultaneously. For more information about the USB hub, please refer to the enclosed manual of the device.



Figure 11: 4 Port USB Hub Ex-1163HM

3 START-UP

3.1 Installation

The following chapter explains the installation of the BATmode system in the nacelle of a wind turbine. If you use microphone discs or bat detector dongles not purchased from bat bioacoustictechnology please follow the installation instructions of the manufacturer of your devices.

3.1.1 BATmode 2S and BATmode 2S+ Main Detector Unit

The main detector unit has to be installed protected against splashing water and mechanical strain.

If you want to install the device on a VESA compatible mounting plate, remove the device's feet and install the provided VESA mounting brackets. Use the VESA mounting screws to fix the device on the mounting plate.

If you install the device on a DIN rail, please use the DIN rail mounting kit, which is available from bat bioacoustictechnology as accessory.

bat bioacoustictechnology recommends the use of the BATbox S, which is especially made for an easy and safe installation of the BATmode 2S and BATmode 2S+ in wind turbines. Since the BATmode is installed in the BATbox S on a DIN rail, the BATmode comes with preinstalled DIN rail mounting kit when you purchase a BATmode system and a BATbox S at the same time.



Be careful not to damage the warranty seals, when removing the device's feet. A damaged seal will invalidate the warranty agreement.



Ensure a sufficient air circulation around the BATmode 2S and BATmode 2S+ main detector unit. Overheating can cause system failure or damage to the BATmode system.

3.1.2 UltraSoundGate 116Hnbm (optional)

The BATmode can be operated with up to 4 UltraSoundGates 116Hnbm. These has to be installed protected against splashing water and mechanical strain next to the main detector unit.

bat bioacoustictechnology recommends the use of the BATbox S, which is especially made for an easy and safe installation of the UltraSoundGate 116Hnbm in wind turbines. To mount the UltraSoundGate 116Hnbm in the BATbox S use the clamp in the BATbox S.

3.1.3 UltraSoundGate 416Hnbm (optionally)

Alternatively, to the UltraSoundGate 116Hnbm, the BATmode can also be used with an UltraSoundGate 416Hnbm. This has to be mounted protected against splashing water and mechanical strain next to the BATmode.

bat bioacoustictechnology recommends the use of the BATbox S. This is especially designed for an easy and safe installation of the UltraSoundGate 416Hnbm in the nacelle of wind turbines. The UltraSoundGate 416Hnbm is fixed on the inside of the door of the BATbox S with a Velcro strip (not included in delivery scope).

3.1.4 Cellular Antenna with Magnetic Base (exclusively BATmode 2S)

With its magnetic base, the cellular antenna of the BATmode 2S can be easily mounted on most metallic surfaces. Please consider that electromagnetic shielding caused by closed metallic housings (for example the nacelle housing of a wind turbine, which is made of aluminium) may result in poor cellular network reception. In such cases, try to install the antenna outside the electromagnetic shielding producing housing.

3.1.5 Antenna Disc (exclusively BATmode 2S+)

To install the antenna disc, drill a mounting hole with 100 mm diameter in the bottom of the nacelle of the wind turbine. To guarantee for the best possible WIFI reception at the tower base the disc should be installed looking down to the ground as vertically as possible. The disc has to be mounted with three 3.5 mm SPAX-screws. bat bioacoustictechnology recommends to pre-drill the mounting holes for the SPAX-screws.



To avoid damage caused by water do not install the disc in the lowest point of the nacelle. Moisture can cause system failure or damage to the BATmode system.

If the BATmode 2S+ system is installed at sites other than the nacelle of the wind turbines, aim the antenna disc towards a potential receiver and install it using the mounting holes.

Please note that the range of the WIFI signal may be significantly reduced due to objects in the signal propagation path.

Since the temperature sensor of the BATmode 2S+ system is located in the antenna disc, an installation of the antenna disc inside the tower of a wind turbine or other closed rooms can lead to corrupt recorded temperature data.

3.1.6 Microphone Disc GM50/GM90 (optionally)

To install the microphone disc GM50 or GM90 also a mounting hole with 60 or 100 mm diameter, respectively, has to be drilled in the bottom of the nacelle of the wind turbine. In compliance to most legal guidelines, the best place is at the bottom of the nacelle between the tower and the rotor of the wind turbine. To guarantee for optimal acoustical bat monitoring results the disc should be installed looking down to the ground as vertically as possible. The disc has to be mounted with three 3.5 mm SPAX-screws. bat bioacoustic technology recommends to pre-drill the mounting holes for the SPAX-screws.



To avoid damage caused by water do not install the disc in the lowest point of the nacelle. Moisture can cause system failure or damage to the BATmode system.



Since the GM90 microphone disc is calibrated with the foam ring for weather protection, do not remove it to ensure a correct data acquisition.

3.1.7 Tower Microphones TM10 and TM20 (optionally)

To install the tower microphones in the wall of the tower of the wind turbine, a borehole with at least 22mm (TM20) or 14mm (TM10) diameter is required. If possible, this should be on the side of the tower facing away from the main rain and wind direction. With the help of the optional mounting rod and the magnetic base, the microphones can be fixed in steel towers to the desired depth. For tower made of concrete, please use adhesive pads on the magnetic feet to attach the microphones on the inner wall.

Alternatively, the TM20 Tower Microphone can also be fixed using a M3 threaded hole on the back of the microphone housing.



Make sure that the tip of the tower microphones slightly protrudes on the outside of the tower. If your microphone tip is within the borehole, acoustic reflections on the bore walls may reduce the quality of your recordings.

3.1.8 USB Hub (optionally)

The USB hub has to be mounted protected against splashing water and mechanical strain.

To install the USB hub, use either the mounting holes in the hub housing or the enclosed DIN rail mount.

bat bioacoustic technology recommends the use of the BATbox S. This is especially designed for an easy and safe installation of the USB hub in the nacelle of wind turbines. The USB hub is fixed and grounded in the BATbox S on a DIN rail.

3.1.9 USB power plug (optionally)

The USB power plugs, which supply the heating units of the microphones discs, have to be plugged into a 230V socket protected against splashing water.

3.2 Connecting



Only use power supplies authorized or supplied by bat bioacoustic technology, since the use of different devices can cause system failure, damage and loss of data. Do not use tools (nipper, wrench, ...) for fixation of cable connections since this can damage the connectors and/or the wires. Always use strain reliefs to avoid unintentional disconnection.

3.2.1 When measuring at one or two measuring points with an UltraSoundGate 116Hnbm

1. Connect the USB 2.0 interface connectors of the UltraSoundGates with the green marked UltraSoundGate ports on the front of the BATmode (see Figure 1).
2. If you utilize GM50 microphone discs with two XLR ports, connect the XLR-input connectors of the UltraSoundGates with the single end of the microphone cables. Subsequently, connect both connectors at the other end of the y-wires with the microphone and reference signal speaker connectors of the GM50 microphone discs. Due to different pin numbers, it is not possible to connect the microphone cable incorrectly. If you are using GM90 microphone discs, use the microphone cable to connect the microphone input of the UltraSoundGates to the microphone connector of the GM90 microphone discs.

When using tower microphones TM10 or TM20, connect the built-in cables to the XLR microphone input of the respective UltraSoundGate.

3. When measuring at one measuring point using a GM90 microphone disc, contact the microphone heater by connecting the heating output connector on the BATmode to the microphone disc with the heating cable.

When measuring at two measuring points and using two GM90 microphone discs, contact the microphone heaters of the microphone discs by connecting the USB heating cables to the USB power plugs and plug them into a 230V outlet.



Please note that microphone discs GM90 with a heating connection marked with "5V" have to be operated only via USB heating cables and not via the heating output of the BATmode. Violation may result in the destruction of the microphone heater and equipment failure and damage, as well as data loss.

4. **Exclusively BATmode 2S:**

Connect the cellular antenna to the cellular antenna connector of the BATmode 2S.

Exclusively BATmode 2S+:

Connect the antenna wires with the corresponding connectors at the BATmode 2S+ and the antenna disc.

Ensure not to interchange both wires. This would cause declined signal reception levels of the WIFI and cellular network connection.

5. Exclusively BATmode 2S+:

Use the temperature sensor cable to connect the temperature sensor input of the BATmode 2S+ with the corresponding temperature sensor output of the antenna disc.

6. Exclusively BATmode 2S+:

Optionally, precipitation data can be acquired by the BATmode 2S+. For this purpose, a precipitation sensor has to be connected to BATmode 2S+. For connecting please refer to the manual of the precipitation sensor.



Only use authorized precipitation sensors und connection wires, since the use of different devices can cause system failure, damage and loss of data.

7. To simplify the parameterization of the BATmode system peripheral pc devices (mouse, keyboard, screens, ...) can be connected to the free USB and Minidisplay ports, optionally.
8. If it is intended to use wired LAN connection to remotely access the BATmode system, connect a corresponding Ethernet cable to the LAN port (RJ45, not included in delivery) of the BATmode.
9. Finally, connect the power supply to the BATmode.

3.2.2 When measuring at more than two measuring points with UltraSoundGates 116Hnbm

1. Initially, using a USB cable to connect the upstream port of the USB hub to one of the UltraSoundGate ports on the front panel of the BATmode (see Figure 1).
2. Use the remaining USB cables to connect the UltraSoundGates 116Hnbm to the downstream ports on the USB hub.
3. If you utilize GM50 microphone discs, connect the XLR-input connectors of the UltraSoundGates with the single end of the microphone cables. Subsequently, connect both connectors at the other end of the y-wires with the microphone and reference signal speaker connectors of the GM50 microphone discs. Due to different pin numbers, it is not possible to connect the microphone cable incorrectly. If you are using GM90 microphone discs, use the microphone cables to connect the microphone input of the UltraSoundGates to the microphone connector of the GM90 microphone discs.

When using tower microphones TM10 or TM20, connect the built-in cables to the XLR microphone input of the respective UltraSoundGate.

4. If you utilize GM90 microphone discs, contact the microphone heaters of the microphone discs by connecting the USB heating cables to the USB power plugs and plug them into a 230V outlet.



Please note that microphone discs GM90 with a heating connection marked with "5V" have to be operated only via USB heating cables and not via the heating output of the BATmode. Violation may result in the destruction of the microphone heater and equipment failure and damage, as well as data loss.

5. **Exclusively BATmode 2S:**

Connect the cellular antenna to the cellular antenna connector of the BATmode 2S.

Exclusively BATmode 2S+:

Connect the antenna wires with the corresponding connectors at the BATmode 2S+ and the antenna disc.

Ensure not to interchange both wires. This would cause declined signal reception levels of the WIFI and cellular network connection.

6. **Exclusively BATmode 2S+:**

Use the temperature sensor cable to connect the temperature sensor input of the BATmode 2S+ with the corresponding temperature sensor output of the antenna disc.

7. **Exclusively BATmode 2S+:**

Optionally, precipitation data can be acquired by the BATmode 2S+. For this purpose, a precipitation sensor has to be connected to BATmode 2S+. For connecting please refer to the manual of the precipitation sensor.



Only use authorized precipitation sensors and connection wires, since the use of different devices can cause system failure, damage and loss of data.

8. To simplify the parameterization of the BATmode system peripheral pc devices (mouse, keyboard, screens...) can be connected to the free USB and Minidisplay ports, optionally.
9. If it is intended to use wired LAN connection to remotely access the BATmode system, connect a corresponding Ethernet cable to the LAN port (RJ45, not included in delivery) of the BATmode.
10. Finally, connect the power supply to the BATmode.

3.2.3 When measuring at multiple measuring points with an UltraSoundGate 416Hnbm

1. Connect the USB 2.0 interface connector of the UltraSoundGate 426Hnbm with one of the green marked UltraSoundGate ports on the front of the BATmode (see Figure 1).
2. If you utilize GM50 microphone discs, connect the XLR-input connectors of the UltraSoundGate with the single end of the microphone cables. Subsequently, connect both connectors at the other end of the y-wires with the microphone and reference signal speaker connectors of the GM50 microphone discs. Due to different pin numbers, it is not possible to connect the microphone cable incorrectly. If you are using GM90 microphone discs, use the microphone cables to connect the microphone inputs of the UltraSoundGate to the microphone connector of the GM90 microphone discs.

When using tower microphones TM10 or TM20, connect the built-in cables to the XLR microphone inputs of the UltraSoundGate.

3. If you utilize GM90 microphone discs, contact the microphone heaters of the microphone discs by connecting the USB heating cables to the USB power plugs and plug them into a 230V outlet.



Please note that microphone discs GM90 with a heating connection marked with "5V" have to be operated only via USB heating cables and not via the heating output of the BATmode. Violation may result in the destruction of the microphone heater and equipment failure and damage, as well as data loss.

4. **Exclusively BATmode 2S:**

Connect the cellular antenna to the cellular antenna connector of the BATmode 2S.

Exclusively BATmode 2S+:

Connect the antenna wires with the corresponding connectors at the BATmode 2S+ and the antenna disc.

Ensure not to interchange both wires. This would cause declined signal reception levels of the WIFI and cellular network connection.

5. **Exclusively BATmode 2S+:**

Use the temperature sensor cable to connect the temperature sensor input of the BATmode 2S+ with the corresponding temperature sensor output of the antenna disc.

6. **Exclusively BATmode 2S+:**

Optionally, precipitation data can be acquired by the BATmode 2S+. For this purpose, a precipitation sensor has to be connected to BATmode 2S+. For connecting please refer to the manual of the precipitation sensor.



Only use authorized precipitation sensors und connection wires, since the use of different devices can cause system failure, damage and loss of data.

7. To simplify the parameterization of the BATmode system peripheral pc devices (mouse, keyboard, screens...) can be connected to the free USB and Minidisplay ports, optionally.
8. If it is intended to use wired LAN connection to remotely access the BATmode system, connect a corresponding Ethernet cable to the LAN port (RJ45, not included in delivery) of the BATmode.
9. Finally, connect the power supply to the BATmode.

3.3 First Start-Up

During first start-up of the BATmode system, the following steps should be executed in the named order to individually setup the system and activate all functions.

1. Insert a SIM card in the corresponding slot of the BATmode. The data plan has to include SMS and/or data transmission.

Basically, bat bioacoustic technology recommends the use of PIN free SIM cards, because only an inactivated PIN allows to unlock the SIM card after a reboot of the system automatically.

2. For an initial parameterization connect the peripheral pc devices named in chapter 3.2 (mouse, keyboard, screen) to the BATmode.
3. After connecting the BATmode to the power supply start the system by pressing the On-/Off-switch.
4. While starting Windows the BATcontrol software will be opened automatically.
5. For a start, close the BATcontrol software.
6. The first step now should be to change your user password to ensure data integrity. This is a two-step process:
 - To assign a safe new password press <Ctrl-Alt-Del> and click <Change Password> (pre-configured password: "12345").
 - To allow for an automatic log-on to Windows you have to change the auto-log-on password with the tool "ChangeAutologonPassword", which can be find under <Start  -> All Programs -> bat bioacoustic technology -> ChangeAutologonPassword>.

Important: Both passwords have to match!

7. If you inserted a SIM card, you have to specify the APN data of your mobile provider to establish a cellular data connection. For this purpose:
 - Navigate to <Start  -> Settings -> Network&Internet -> Cellular>.
 - Choose the shown cellular network.
 - Click <Advanced options> and <Add an Internet APN>.
 - Choose a <Profile name>, for instance "telekom".
 - Type the provided <APN>, <User name> and <Password>.
 - Choose <Type of sign-in info > "None".
 - Choose <IP type> "Default".
 - Enable <Apply this profile>.
 - Click <Save>.

8. Start BATcontrol.

9. Exclusively BATmode 2S+:

Assign new WIFI hotspot settings on the page <Connectivity>. Insert a new WIFI-SSID as well as a new password and start the hotspot.

3.4 Remote access to the BATmode System

Alternatively, you can use peripheral devices named in chapter 3.2 to parameterize the BATmode system and start the acoustical monitoring or you can utilize remote access via WIFI, LAN or cellular network connections.

3.4.1 Remote Access via WIFI Connection

To allow for a remote access via WIFI BATcontrol provides a WIFI hotspot (pre-configured by bat bioacoustictechnology):

- SSID: Your chosen SSID (pre-configured SSID: „BATmode“)
- WIFI password: Your chosen WIFI password (pre-configured password: „12345678“)
- IP of the WLAN adapter: The IP can be found in BATcontrol on the connectivity page or in myBAT. In most cases, the IP is “192.168.137.1”.
- User: BAT
- User password: Your chosen user password (pre-configured user password: „12345“)

The SSID as well as the password of the WIFI hotspot can be changed in BATcontrol.

To change the user password please refer to bullet 6 in chapter 3.3.

Remote access is possible via WIFI-capable PCs (Windows, Linux or Mac OS operating systems), smartphones or tablets (Android, Windows phone, iOS), whereat additional programs or apps might be necessary. bat bioacoustictechnology recommends the following software tools:

- Windows: Additional software is not required; software is integrated in Windows (Remote Desktop Connection)
- Mac OS and iOS: Microsoft Remote Desktop
- Android and Windows Phone: Microsoft Remote Desktop

Example for Windows:

The following steps have to be executed on a Windows running PC to remotely access BATmode via WIFI:

- (a) Connect to the WIFI hotspot of the BATmode system (SSID and password see above).
- (b) Open the program Remote Desktop Connection (for instance type “Remote Desktop Connection” in <Search Windows>).
- (c) Enter in the field <Computer> the IP address of the WIFI adapter of the BATmode (see above).
- (d) Press <Connect> and sign in with your user password.

3.4.2 Remote Access via LAN Connection

To establish a remote connection by LAN the BATmode has to be connected either to the WWW or directly to another PC (for example a Notebook) via the RJ45 port.

- If you connect the BATmode to the WWW please use a static and public IP address of the LAN adapter.
- If you connect the BATmode directly to another PC, use the computer name "BATmode" instead the IP-address to access the BATmode via remote desktop connection.
- User: BAT
- User password: Your chosen user password (pre-configured user password: „12345“)

To change the user password please refer to bullet 6 in chapter 3.3.

Remote access is possible via PCs (Windows, Linux or Mac OS operating systems), smartphones or tablets (Android, Windows phone, iOS), whereat additional programs or apps might be necessary. bat bioacoustictechnology recommends the following software tools:

- Windows: Additional software is not required; software is integrated in Windows (Remote Desktop Connection)
- Mac OS and iOS: Microsoft Remote Desktop
- Android and Windows Phone: Microsoft Remote Desktop

Example for Windows:

The following steps have to be executed on a directly connected Windows running PC to access BATmode:

- (a) Connect the BATmode directly with the other PC via an Ethernet cable.
- (b) Open the program Remote Desktop Connection (for instance type "Remote Desktop Connection" in <Search Windows>).
- (c) Enter in the field <Computer> the computer name "BATmode"
- (d) Press <Connect> and sign in with your user password.



To establish a remote desktop connection via LAN and WWW the IP address of the BATmode have to be public. If your provider uses a NAT server, your IP address is not public. In such cases server based remote services can be used (bat bioacoustictechnology recommends TeamViewer). However, to utilize those services, the corresponding software has to be installed on the BATmode as well as on the accessing PC, smartphone or tablet.

3.4.3 Remote access via Cellular Data Connection

The cellular data connection is established via the mobile network. For this purpose, a SIM card has to be inserted in the BATmode and a connection has to be configured (APN settings, see bullet 1 and 7 in chapter 3.3).

Subsequently, if mobile reception level and SIM card balance are sufficient, the BATmode can be accessed remotely. Indeed, due to technical reasons, the SIM card need to feature a public IP address (ask your provider) to establish a connection. Alternatively, server based remote services can be used (bat bioacoustictechnology recommends TeamViewer). However, to utilize those services, the corresponding software has to be installed on the BATmode as well as on the accessing PC, smartphone or tablet.

4 BATCONTROL SOFTWARE

4.1 Structure

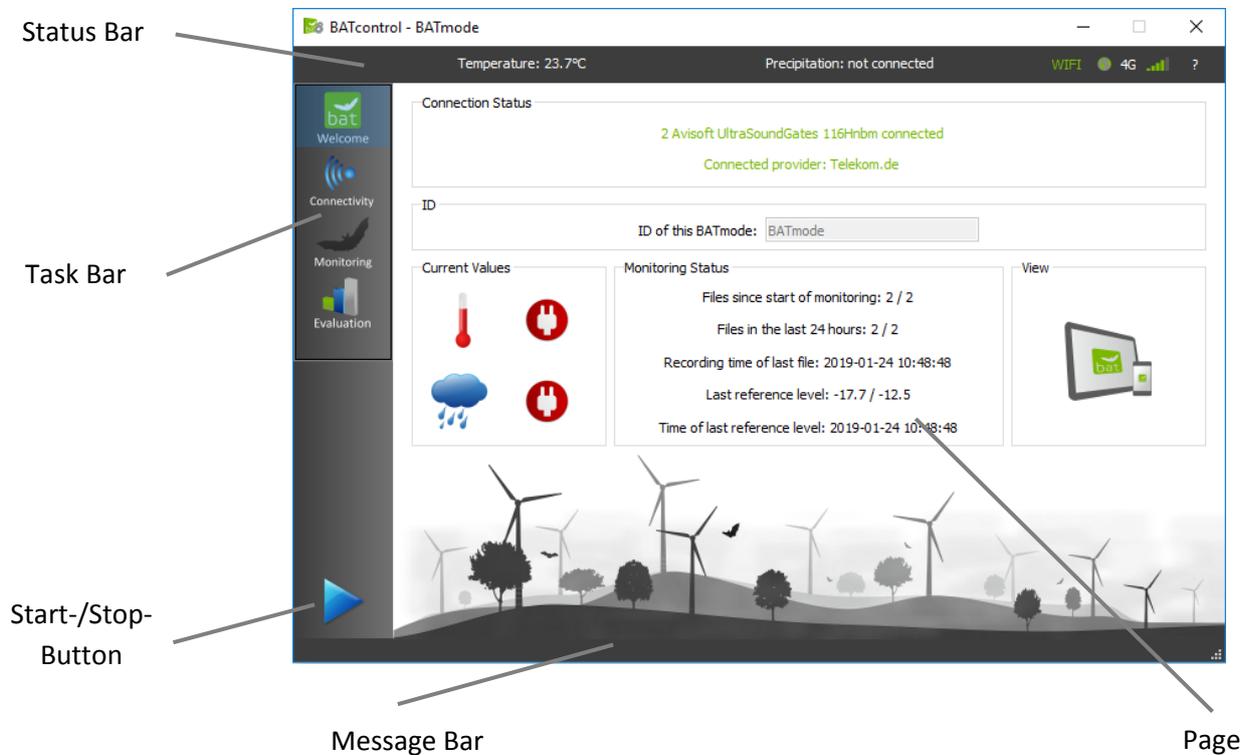


Figure 12: Structure of the BATcontrol software

Fundamental control elements of the BATcontrol software are depicted in Figure 12 and will be described within this chapter in detail.

Words in <...> represents designations used within the BATcontrol software.

4.1.1 Status Bar

The status bar shows current status data of the BATmode system:

- Current measured temperature value
- Current measured precipitation value
- WIFI hotspot (If the hotspot is started, a green WIFI symbol is shown.)
- Internet connection (If the BATmode is online a globe token is shown.)
- Type of the mobile broadband connection (G: GPRS, E: Edge, 3G: UMTS, H: HSPA, 4G: LTE)
- Signal level of the mobile broadband connection

4.1.2 Task Bar

By using the task bar on the left side you can switch between the program pages.

4.1.3 Pages

The following pages are available:

- <Welcome>: General information and view settings
- <Connectivity>: Setting of WIFI hotspot, WWAN connection, status messages, remote control and myBAT
- <Monitoring>: Settings of the acoustical monitoring
- <Evaluation>: Visualization of different parameter over time and “at a glance” evaluation of the recorded acoustical data

In the following chapter 4.2, pages are described in detail.

4.1.4 Start-/Stop-Button

The Start-/Stop-Button allows for starting and stopping of the acoustical monitoring and, if you using a BATmode 2S+, also the simultaneous recording of temperature and precipitation.

Settings used for the acoustic monitoring can be made on the <Monitoring> page.

The number of channels or measurement points to be acquired is selected automatically based on the connected UltraSoundGates. For example, if you want to examine two measurement points in parallel, connect two UltraSoundGates 116Hnbm to the system before starting the monitoring.

When starting the monitoring with the start/stop button the recording of temperature and precipitation data starts automatically. An average value of the environmental data recorded every 30-seconds is determined every 10 minutes, regardless of the recording times of the acoustic monitoring set on the page <Monitoring>, and this is written to the file "conditionlog.txt" in the monitoring directory. The specified time stamp always refers to the beginning of the 10-minute mean interval. If no sensor is connected or if the system BATmode 2S is used, no recording of temperature and precipitation takes place.



The BATmode 2S+ system is specified for the use of the temperature sensor integrated in the antenna disc as well as the precipitation sensor "Precipitation Sensor" of Adolf Thies GmbH & Co. KG. Do not use non-approved sensors, as this may result in failure or damage to the device as well as data loss.

4.1.5 Message Bar

Latest messages are shown in the message bar.

4.2 Operation

4.2.1 Page: Welcome

The welcome page shows the most essential data of your monitoring and the status of the components of the BATmode system.

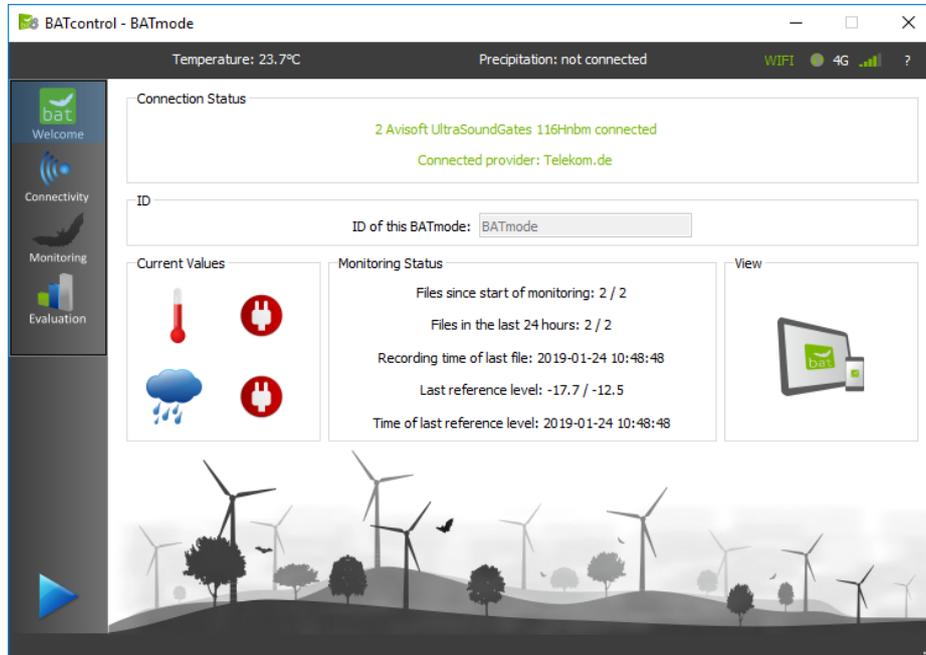


Figure 13: Welcome Page

4.2.1.1 <Connection Status> Box

The <Connection Status> box shows the current connection status of BATcontrol:

- Up to four UltraSoundGate 116Hnbm or one UltraSoundGate 416Hnbm from Avisoft Bioacoustics can be used to acoustically record bat calls. The type and number of connected UltraSoundGates are displayed.
- The status of the mobile radio modem indicates the current state of the cellular connection. All possible states are listed in Table 10.



Basically, bat bioacoustic technology recommends the use of PIN free SIM cards, because only an inactivated PIN allows to unlock the SIM card after a reboot of the system automatically.

Table 10: Possible states of cellular connection

SIM state	How to solve problem:
No SIM inserted	Insert SIM
SIM locked	Enter PIN
No cellular network connection	Connect antenna or move device in area with network coverage
Modem not available	Activate Mobile Broadband Adapter in the Windows Device Manager
Modem turned off	Turn on Mobile Broadband Interface in Windows
SIM account not active	Activate SIM card at your provider
Connected provider: ... (Data class)	Device is registered to cellular network

4.2.1.2 <ID>-Box

The ID of the BATmode is the individual identifier of the BATmode device. It depicts the beginning of the file name in all recorded WAV files and is sent in all status messages. Please choose an ID, which allows you to assign the files to the respective monitoring, e.g. "BATmode1Windpark1".

4.2.1.3 <Current Values> Box (only relevant for BATmode 2S+)

The <Current Values> box shows current temperature and precipitation values. If a sensor is not correctly connected, a corresponding red symbol is displayed.

4.2.1.4 <Monitoring Status> Box

The <Monitoring Status> box displays latest values of a running acoustic monitoring. In a simultaneous monitoring of several measuring points, the values of the individual channels are separated by a slash symbol ("/").

4.2.1.5 <View> Box

By using the view button (schematic picture of a PC or tablet, respectively) you can change between full screen and normal mode. The full screen view is optimized for mobile devices with touch control and the normal view is intended to be used for desktop PCs with mouse control.

4.2.2 Page: Connectivity

On page <Connectivity>, you can configure all settings, which are relevant to monitor the BATmode system remotely.

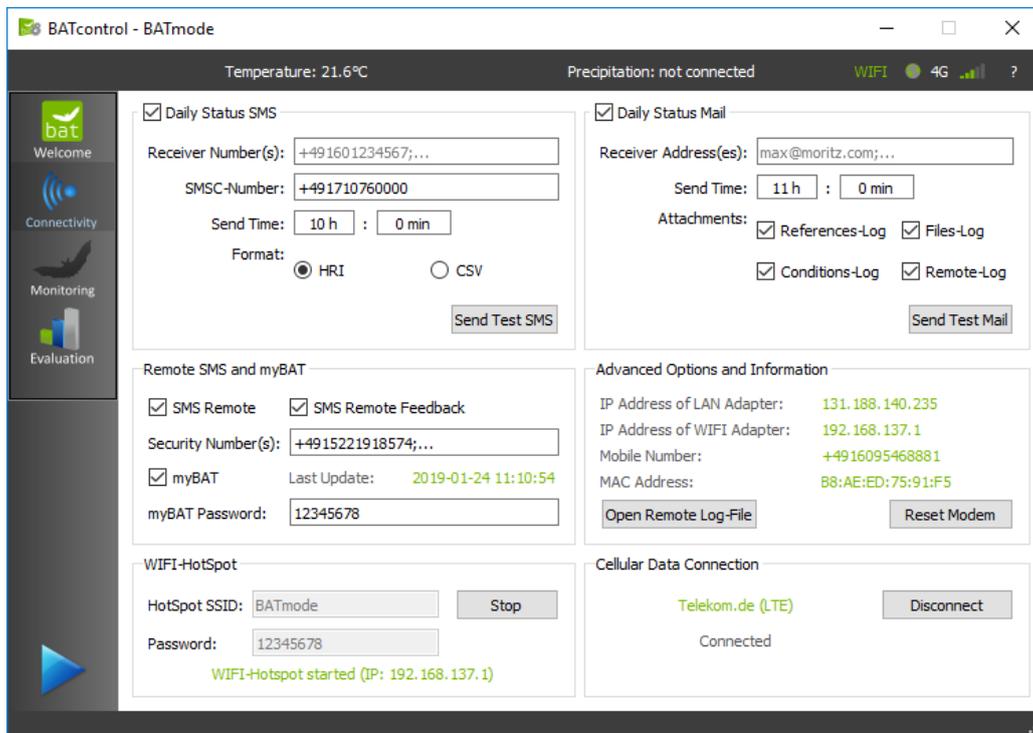


Figure 14: Connectivity Page

4.2.2.1 <Daily Status SMS> Box

The BATmode system can send daily status messages via SMS to you at a specified time. If you wish to receive the daily messages, check the box <Daily Status SMS> and enter the desired receiver's number in international format (for example, +49160123456) at <Receiver Number(s)>. If multiple receivers are desired, enter several numbers separated by ";". To send a SMS it is essential, that the right SMS-Center number of your SIM provider is typed in the <SMSC-Number> field. Ask your provider for it. Transmission time is set via the <Send time> input fields. Two different SMS formats are available and can be chosen by the radio buttons <human readable> and <CSV>. While the human-readable format allows for a manual message evaluation, the CSV (comma-separated values) format is intended to be used with spreadsheet analysis tools or databases. You can send a test message to the specified number(s) by pressing <Send Test SMS>. The content of the messages is composed of current status values of the BATmode system. In the human-readable format corresponding acronyms are prefixed to the respective values. Table 11 lists the used acronyms and respective descriptions. By choosing the CSV format values are separated only with semicolons and acronyms are used any longer. A slash character ("/") separates values of different microphone channels or measurement points.

To always comply with the maximum character number of 160 characters per SMS, status SMS may be subdivided into two individual messages if required.



To send a status SMS a sufficient SIM card balance or adequate mobile tariff is resumed. Furthermore, the system has to be installed in an area with sufficient mobile network coverage.

Table 11: Meaning of the acronyms used in status SMS

Acronym	Meaning
ID	ID of the system defined with Prefix. The value is also prefixed in the filenames of the record files.
MON	Current status of the monitoring. If monitoring is running, the time periods (e.g., "16: 00-09: 00") or the relative minutes with respect to sunrise and sunset (e.g. "-10/40") are sent. If no time periods are set, the status is set as "ungated".
LRL	Last recorded reference value of the microphone played by the test signal speaker. In brackets deviation from the calibration value.
LRD	Recording date of the last reference value.
LFD	Recording date of the last record.
FL24	Number of records in the last 24 hours.
FT	Total number of records in monitoring directory.
FC	Free disc space on drive C in GB.
FD	Free disc space on drive D in GB.
SL	Current mobile signal level in %. If a connection to the mobile network cannot be established, the following error messages are possible: <i>MNA</i> : Modem not available <i>MTO</i> : Modem turned off <i>LOS</i> : SIM locked <i>NOS</i> : No SIM detected <i>NAS</i> : SIM account not active
WWW	Status of Internet connection. The following messages are possible: <i>Off</i> : System is offline <i>LAN</i> : System is online via a LAN connection <i>E</i> : System is online via mobile connection, current data type is EDGE <i>G</i> : System is online via mobile connection, current data type is GPRS <i>3G</i> : System is online via mobile connection, current data type is UMTS <i>H</i> : System is online via mobile connection, current data type is HSDPA <i>4G</i> : System is online via mobile connection, current data type is LTE
WIFI	Status of WIFI-Hotspot.

4.2.2.2 <Daily Status Mail> Box

The BATmode system can send daily status mails to you at a specified time. If you wish to receive the daily mails, check the box <Daily Status Mail> and insert the receiver's address in <Receiver Address(es)>. Multiple recipient addresses can be entered separated by a ";". Sending time is set in <Send time>. By checking the boxes <Reference-Log>, <Files-Log>, <Remote-Log> and/or <Conditions-Log> you can determine, which files are attached to the daily status mail. A slash character ("/") separates values of different microphone channels or measurement points within the message. You can send a test mail to the specified address(es) by pressing <Send Test Mail>.



To send mails an active Internet connection is required which did not block ports 25 and 587.

4.2.2.3 <Remote SMS and myBAT> Box

SMS-Remote

Basic remote commands can be transmitted to the BATmode system via SMS. If you want to allow SMS remote, check the box <SMS Remote>. To prevent SMS commands execution received from unauthorized persons, telephone numbers from which SMS commands should be accepted must be stored in the <Security Number(s)> field. The numbers are to be entered in international format separated by semicolons. Available commands and the corresponding system responses are listed in

Table 12. If the check box <SMS Remote Feedback> is enabled, the system confirms executed command SMS via response SMS to the sender of the command.



To use SMS remote commands an unlocked SIM card has to be inserted in the BATmode. Basically, bat bioacoustictechnology recommends the use of PIN free SIM cards, because only an inactivated PIN allows to unlock the SIM card after a reboot of the system automatically. Furthermore, the system has to be installed in an area with sufficient mobile network coverage.

myBAT

myBAT is a cloud based monitoring, control and administration tool for your BATmode system. It allows you to view the status of your monitoring system and control it remotely. Furthermore, information about recorded data are imaged and can be exported to external tools. For further information and to signup visit www.mybat.bioacoustictechnology.de.

To activate myBAT for your BATmode enable <myBAT>. Enter a password in the field <myBAT Password>. You will need this password to assign your BATmode system in myBAT to your account.

The last time BATcontrol updated the system status on myBAT is shown under <Last myBAT Update>.



myBAT requires an active Internet connection in which port 3306 may not be blocked. By using myBAT increased charges of your Internet service provider may occur.

Table 12: SMS remote commands

SMS text	System response
Reboot!	System reboots.
Shutdown!	System shuts down. <i>Caution: The system cannot be started again remotely!</i>
Send status!	Status SMS is send to predefined number.
Send Mail!	Status mail is send to predefined E-Mail address. <i>If no receiver address is defined and/or no Internet connection is available, no action is conducted.</i>
Send Mail to <i>max(at)moritz.com!</i>	Status mail is send to <i>max@moritz.com</i> . <i>If no Internet connection is available, no action is conducted.</i> <i>Please note that since BATcontrol 2.1.0 this command must also be terminated with an exclamation mark.</i>
Start WIFI-Hotspot!	WIFI hotspot is started with the predefined settings.
Stop WIFI-Hotspot!	WIFI-Hotspot stops.
Connect WWAN!	Cellular connection will be established.
Disconnect WWAN!	Cellular connection will be disconnected.
Start monitoring!	Acoustic monitoring will be started ungated. That means acoustic events will be recorded independent of time of day.
Start monitoring: <i>11:00-14:00!</i>	Acoustic monitoring will be started gated by recording period one. Consequently, acoustic events will be recorded in this example only in the time period between <i>11:00</i> and <i>14:00</i> o'clock.
Start monitoring: <i>11:00-14:00</i> and <i>20:00-02:00!</i>	Acoustic monitoring will be started gated by recording period one and two. Consequently, acoustic events will be recorded in this example in the time period between <i>11:00</i> and <i>14:00</i> o'clock as well as <i>20:00</i> and <i>02:00</i> o'clock.
Start monitoring: <i>-20/10!</i>	Acoustic monitoring will be started relative to sunrise and sunset. The daily recording of acoustic events takes place in this example between <i>20</i> minutes before sunset and <i>10</i> minutes after sunrise.
Stop monitoring!	Acoustic monitoring will be stopped.
Kill Recorder!	The acoustic monitoring is stopped by closing the RECORDER software with a kill command. This allows the monitoring to stop when the RECORDER software displays an error message
Reset USG!	Terminates running monitoring and restarts the UltraSoundGate from Avisoft by disconnecting it from the power supply for some seconds.
Send MAC!	The MAC address of the BATmode is send to the sender of the SMS.
Send WIFI-IP!	The WIFI IP address of the BATmode is send to the sender of the SMS.
Send LAN-IP!	The LAN IP address of the BATmode is send to the sender of the SMS.

SMS text	System response
Enable Status-Mail!	Enables the transmission of a daily status mail. Please consider that correct mail settings has to be inserted to use this command.
Disable Status-Mail!	Disables the transmission of a daily status mail.
Enable Status-SMS!	Enables the transmission of a daily status SMS. Please consider that correct SMS settings have to be specified to use this command.
Disable Status-SMS!	Disables the transmission of a daily status SMS.
Send condition!	Current temperature and precipitation values are sent to the SMS sender.
Send calibration!	Current calibration values of the microphone are sent to the SMS sender.
Add Security Number: +491601234567!	Adds the phone number +491601234567 to the Security Numbers. Only these numbers are allowed to send SMS commands to the BATmode system.

4.2.2.4 <Advanced Options and Information>-Box

The <Advanced Options and Information>-Box shows the most important addresses of the BATmode system that are required to connect via remote access:

- <IP Address of LAN Adapter>: Address of the LAN adapter to establish a wired connection via "Remote Desktop Connection". Alternatively, the computer name "BATmode" can be used instead of the IP address.
- <IP Address of WIFI Adapter>: Address of the WIFI adapter to establish a wireless WLAN connection via the "Remote Desktop Connection" to the WIFI hotspot of the BATmode.
- <Mobile Number>: The mobile phone number of the inserted SIM card. If no mobile number is displayed, despite a SIM card is inserted and successfully registered in the mobile network (see Welcome page), this does not affect the functionality of the mobile radio connection.
- <MAC Address >: The MAC address is used to uniquely identify the BATmode in myBAT.

All received SMS and myBAT commands are stored in a log file. To open the log file press <Open Remote Log-File>.

With the button <Reset WWAN Modem>, a hardware reset of the modem can be carried out if a problem with the mobile radio modem occurs. SMS connection as well as a set mobile data connection reconnect automatically after the reset.

4.2.2.5 <WIFI-Hotspot> Box (only relevant for BATmode 2S+)

Use the <Start>/<Stop> button to deactivate or activate the WIFI hotspot. The SSID as well as the password of the WIFI hotspot can be changed in the respective fields

Since WIFI hotspot feature is exclusively available for BATmode 2S+, the box will be disabled by use of BATmode 2S.



Please note that the WIFI adapter of the BATmode can only manage one connection at a time. This means that if you connect the BATmode via WLAN to your network (the WLAN is provided by a router) it is no longer possible to open a WIFI hotspot through BATcontrol.

4.2.2.6 <Cellular Data Connection> Box

Press the <Connect> or <Disconnect> button, respectively, to either connect or disconnect the pre-configured cellular data connection.



To establish a cellular data connection a SIM card with unlocked PIN has to be inserted in the BATmode and correct APN settings has to be configured. Basically, bat bioacoustic technology recommends the use of PIN free SIM cards, because only an inactivated PIN allows to unlock the SIM card after a reboot of the system automatically.

4.2.3 Page: Monitoring

On page <Monitoring>, the setup for the acoustical monitoring is configured.

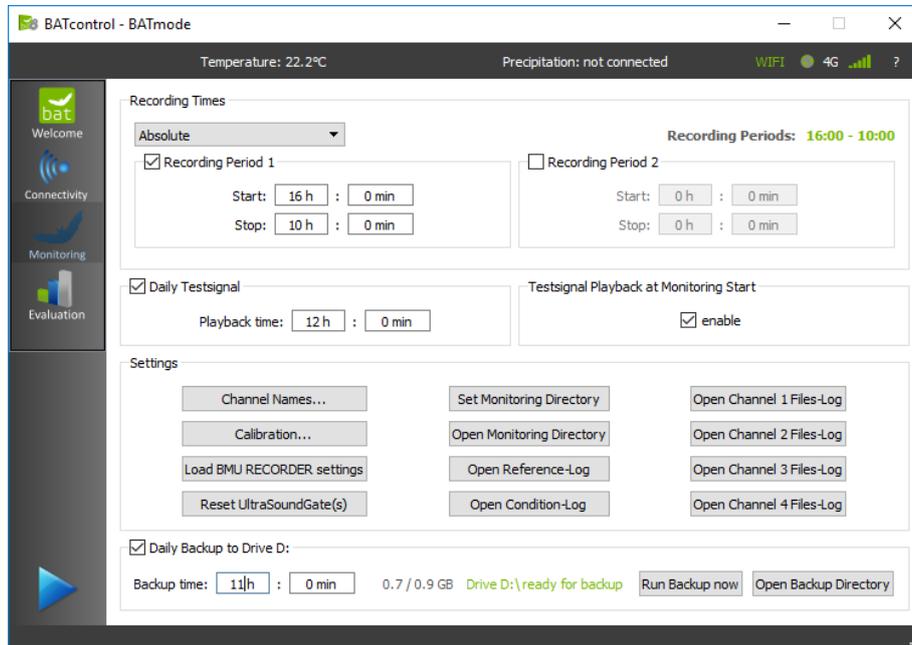


Figure 15: Monitoring Page

4.2.3.1 Recording Times of Acoustical Monitoring (<Recording Times> - Box)

The recording times of the acoustic monitoring, that means the daily time intervals within which bat calls will be recorded, can be defined as absolute time intervals or relative to sunrise and sunset.

In case of absolute recording, the daily periods of time within which the recording of bat calls is active are defined by the two fields <Recording Period 1> and <Recording Period 2> (see Figure 15). If neither of both periods is checked, the acoustical monitoring is activated continuously over the whole day.

If bat call recording periods are to be relative to the sun's course, the geographic position of the data acquisition location has to be entered for the calculation of sunrise and sunset times in the fields <Latitude> and <Longitude> (see Figure 16). These coordinates can be determined, for example, on the Internet using map services such as Google Maps. To specify the number of minutes the bat call recording is to be started relative to sunrise and sunset, use the two fields <Delay to Sunset for Start> and <Delay to Sunrise for Stop>. Hereby, negative values represent the number of minutes before and positive values the number after sunrise or sunset, respectively.

The resulting daily recording periods are displayed as <Recording Periods> for the current day in the upper right corner (see Figure 15 and Figure 16).

These settings do not affect the recording of the temperature and precipitation values, which is automatically started with the monitoring and always stores in a 10-minute interval the mean values of the data determined every 30 seconds (exclusively BATmode 2S+).

Figure 16: Relative Monitoring periods

4.2.3.2 Test of Microphone Sensitivity (<Daily Testsignal> - Box)

To ensure a correct acoustic bat monitoring, which records all bat calls of a maximum pressure level greater than the previously in the calibration (see section 4.2.3.3) defined trigger level ("Level of Trigger Threshold"), an ultrasound signal generator is integrated in the microphone disc. It generates a defined ultrasound signal with known sound pressure level, which allows the monitoring of the microphone sensitivity. By this, the validity of the acoustic monitoring can be verified.

In order to determine microphone sensitivity, the ultrasonic signal generator is activated by the RECORDER software for one minute and generates a temporally varying narrow-band ultrasound signal between 30 and 50 kHz. By this, temperature-dependent influences on the resonance frequency of the ultrasound signal generator are compensated. With the automatically opened "Trigger Level Calibration" dialogue, the software RECORDER measures the maximum signal level relative to the maximum output value of the microphone in dBFS (dB Full Scale), continuously (see Figure 17). Finally, the maximum measured value is stored in the file "reference.txt" in the monitoring directory.

A fictitiously assumed value of -13.6 dBFS means that the maximum sound pressure level of the test signal generator determined during the measurement is -13.6 dB below the maximum output value of the microphone. If the value is within a range of ± 6 dB around the "Full Scale Level of Reference Signal" specified in the calibration certificate, bat monitoring will provide correct data.

If smaller negative values are determined (for example -10 dBFS) than specified in the calibration certificate, the test signal generated by the ultrasonic signal generator is recorded "too loud" by the microphone. This indicates that there are sound reflecting objects in front of the microphone. If, on the contrary, larger negative values are determined (for example -25 dBFS), the test signal is recorded as "too quiet". This is mostly due to dirt, aging or a defect of the microphone.

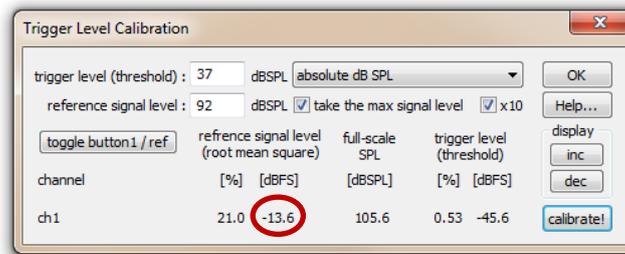


Figure 17: Trigger Level Calibration Dialog of the RECORDER Software

To daily check the sensitivity of the microphone by measuring the reference signal level, enable the box *<Daily Testsignal>*. The playback time of the reference signal can be determined with the two spin boxes. This is independent of the determined recording periods. Nevertheless, to avoid masking of bat calls, it should not be within the recording periods.

If you want to execute the microphone sensitivity test at monitoring start, check the box *<enable>* in *<Testsignal Playback at Monitoring Start>*.



In addition to the measured microphone sensitivity values stored in the file "reference.txt", legal authorities often also demand to record the WAV files of the respective test signals. If you have selected absolute recording periods in the <Recording Times> - Box (see section Settings 4.2.3.1), these WAV files are automatically saved no matter what time you have selected for the daily test signal. However, if relative recording periods are selected, the WAV files will only be saved if the time of the daily test signal is within the selected recording periods. Consequently, if the recording of test signal WAV files is desired in the relative recording periods case, select a time for the test signal that is safely within the relative recording periods throughout the whole year (for example, 01:00).

4.2.3.3 Settings

Use the *<Channel Names ...>* dialog to specify channel names if multiple measurement channels are utilized. These names determine the storage location of the recorded WAV files (selected monitoring directory + "\ Channel Name \"), as well as the identification of the respective channels in the evaluation plots. If the BATmode system is only used for a single measurement point, the definition of a channel name is not necessary and the files are stored directly in the selected monitoring directory. For both, single-channel and multi-channel data acquisition, the filenames of the recorded data are always composed as follows:

[ID of BATmode][date and time of acquisition][autoincremented number].WAV



If you use multiple UltraSoundGates 116Hnbm, please note that the channel-to-UltraSoundGate assignment will not change unless the UltraSoundGates are disconnected from the BATmode system. If you have disconnected the UltraSoundGates from the system, make sure that after reconnection a certain channel also represents the corresponding measurement point.

To make bat call recordings comparable and compatible to German BMU guidelines and the tool ProBat, a calibration of the used trigger level threshold is necessary. For this purpose, open the calibration dialogue by pressing the button <Calibration> (see Figure 18). To perform a calibration, first select whether the microphone used on this channel has a built-in reference signal speaker. The GM50 and GM90 microphone discs as well as the TM20 tower microphone are equipped with reference signal speaker. In contrast, the tower microphone TM10 has no integrated reference signal speaker. Subsequently, enter the desired trigger level threshold (default value: 37 dB SPL) and the calibration data supplied with each microphone. Then press the <Calibrate now!> Button. For further information on BATmode microphone calibration visit <http://www.bioacoustictechnology.de/calibration-of-the-batmode-system/?lang=en>.

Figure 18: Calibration Dialogue



bat bioacoustictechnology recommends to recalibrate microphones after each year of monitoring. This is necessary to consider sensitivity alternations of the microphone and/or changes of the sound pressure level of the test signal speaker, which can be caused by ageing, dirt particles or influences of weather. If you wish to recalibrate your microphone and test signal speaker, contact the support of bat bioacoustictechnology and send the microphones.



To make recorded acoustic data compatible with the evaluation software ProBat, a trigger level threshold of 37 dBSPL or 50 dBSPL must be selected. bat bioacoustictechnology recommends to set the trigger level threshold to 37 dBSPL and only use 50 dBSPL for wind turbines with a very high noise level. Please, consider the enclosed documents of the PROBAT software.

By using the button <Load default RECORDER settings> you can load default BMU-configuration for RECORDER software. These default BMU-configuration conforms to the settings recommended by bat bioacoustictechnology. On loading default values current settings will be discarded.



Please consider that all settings, which are employed within the RECORDER software, are saved on closing the software.

Also running the RECORDER software externally, that means, it is not started by BATcontrol, may affect settings, if one of the configuration files (depends on the selected number of measurement channels)

- "C:\Users\BAT\AppData\Roaming\BATcontrol\recorderconfig.ini",
- "C:\Users\BAT\AppData\Roaming\BATcontrol\recorderconfig1.ini",
- "C:\Users\BAT\AppData\Roaming\BATcontrol\recorderconfig2.ini",
- "C:\Users\BAT\AppData\Roaming\BATcontrol\recorderconfig3.ini" or
- "C:\Users\BAT\AppData\Roaming\BATcontrol\recorderconfig4.ini"

is loaded.

To change settings of the RECORDER-Software, which are not covered by BATcontrol, we recommend the following approach:

- 1) Start monitoring in BATcontrol
- 2) When the RECORDER-Software is opened, stop the recording by pressing the Stop-Button in the RECORDER-Software
- 3) Change settings in the RECORDER-Software
- 4) Close the RECORDER-Software
- 5) Restart monitoring with BATcontrol

Please note that the settings made outside of BATcontrol are only saved for the current number of measurement channels.

The button <Reset UltraSoundGate(s)> restarts connected UltraSoundGates of Avisoft Bioacoustics if an error occurs in the software RECORDER, when the monitoring is started. For this purpose, the voltage supply of the green marked USB UltraSoundGate ports is interrupted for a short time. This triggers a reinitialization of the UltraSoundGates.

By using *<Set monitoring directory>* you can determine the location the recorded bat call files are stored to. Default location is: "C:\BATmode\".

By using *<Open Monitoring Directory>* you can open the location the recorded bat call files as well as environmental data are stored. The default location is: „C:\BATmode\“.

By using *<Open Reference Log>* you can open the file "reference.txt" in the monitoring directory. All microphone sensitivity tests with the test signal speaker are logged in this file. Consequently, this file can thus be used as proof of a correct monitoring.

Clicking *<Open Condition Log>* opens the file "conditionlog.txt" in the monitoring directory. This file contains temperature and precipitation data, which is automatically recorded in a BATmode S+ system, when the acoustic monitoring is started. The time stamp of the values always refers to the beginning of a 10-minute mean interval.

In a single point measurement, clicking *<Open Channel 1 Files Log>* opens the file "FILES.LOG" in the monitoring directory. For multi-channel measurements, the file "Channel Name 1.LOG" is opened in the location of the first channel. All monitoring start/stop events and times of acoustic recordings are logged in this file.

By clicking on the other *<Open Channel x Files Log>* buttons the respective files "Channel Name x.LOG" in the location of the xth channel is opened.

4.2.3.4 Daily Backup

To perform a daily backup of the recorded files to a connected USB device with drive address "D:/" enable the box *<Daily Backup to drive D:>*. The time the daily backup is executed can be chosen with the two corresponding spin boxes.

To trigger the backup manually use the *<Run Backup now>* button.

To open backup directory, press *<Open Backup Directory>*.



Ensure that enough memory is available and that the user has the permission to write on the device. If there is not enough space available or writing is not permitted, backup won't be executed.



Ensure that Windows assigns the drive letter "D" to your backup device. If another drive letter is assigned to your backup drive, backup won't be executed. To assign a different drive letter to your device:

- *Right click on the Start menu .*
- *Select Disk <Management>.*
- *Right-click on the drive letter you want to change and click <Change Drive Letter and Paths>.*

- Click <Change>.
- Use the drop down to the right of <Assign the following drive letter> to select the new drive letter D:.
- Click <OK>.



Make sure that the backup device file system is exFAT. Other file systems sometimes do not allow to store such large number of files that are generated during a continuous bat monitoring.

You can use the backup function to export recorded data from the BATmode system without login on the system. To do this, enable the daily data backup before starting the monitoring and connect a sufficiently large USB stick to the system (bat bioacoustictechnology recommends at least 128 GB). If you want to export the data during the ongoing monitoring, simply remove the stick, which contains all recorded data, and connect a new empty USB stick to the same USB port of the BATmode system. Data recorded and stored on the BATmode system as well as future records will be automatically copied again on the new stick.

4.2.4 Page: Evaluation

The page <Evaluation> visualizes important parameters of the acoustical monitoring as well as of the environmental condition logging. By applying this graphical evaluation tools you can easily assess the quality of your recorded data and intervene, if data quality is below your expectations.

To regenerate the plots, use the button <Refresh>.

If you want to export a plot as pixel or vector graphic, use the button <Export>.

The following plots are available:

4.2.4.1 Reference Level

This plot (see Figure 19) visualizes the sound pressure level of the daily reference signal in reference to the maximum sound pressure level (SPL) of the microphone in dB (see section 4.2.3.2). The horizontal grey lines mark a ± 6 dB discrepancy of the recorded SPL from the SPL determined in the calibration. Variations of the daily test signal level either indicate an altered microphone sensitivity (microphone sensitivity can alter due to ageing, weather induced effects or deposited dirt particles on the microphone's protective grid) or a changed SPL of the test signal speaker. If the daily test signal level is also after a restart of the system constantly beyond the ± 6 dB lines, the microphone or the reference signal speaker may be defective. Please contact the support of bat bioacoustic technology.

To toggle between the reference levels of different microphone channels, use the arrow buttons "<" and ">" next to the plot.



Figure 19: Evaluation Page - Reference Level

Since the file “reference.txt” at the specified monitoring directory is evaluated to create the plot, not only data from the current acoustical monitoring are incorporated in the figure. In addition, data from past monitorings may be shown in the plot, if data was not deleted.

4.2.4.2 Recorded Files (bar chart)

In this bar chart, the numbers of recorded files are plotted per day. Microphone channels are distinguished by differently colored bars. By clicking on the respective entries in the figure legend under the graph, individual microphone channels can be hidden.

Since all WAV files in the monitoring directory are evaluated to create the plot, not only data from the current acoustical monitoring are incorporated in the figure. In addition, data from past monitorings may be shown in the plot, if data was not deleted.

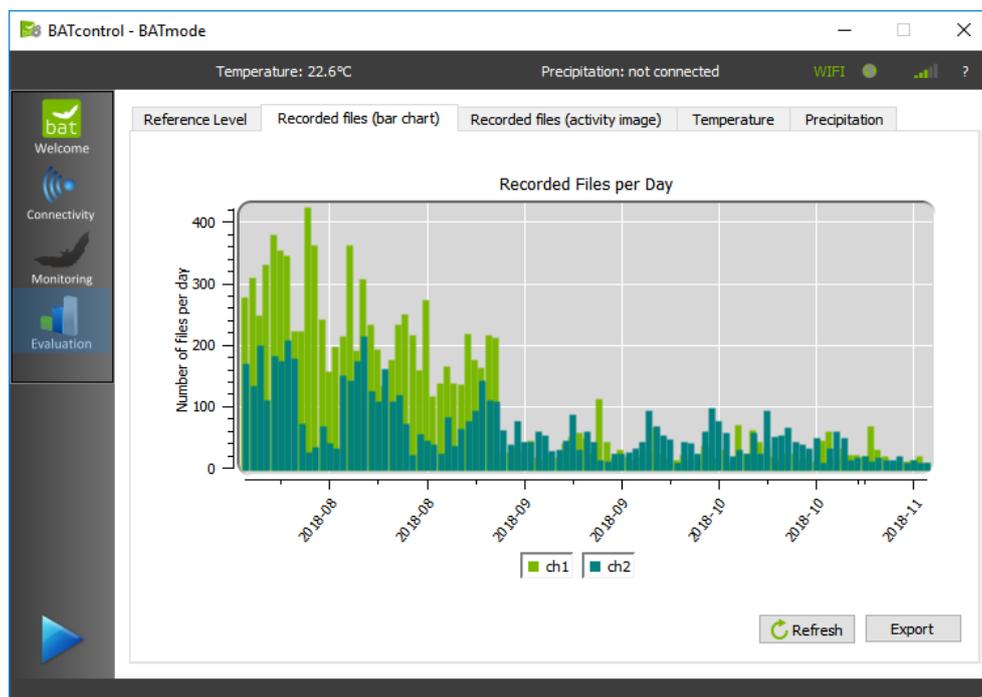


Figure 20: Evaluation Page – Recorded Files per Day

4.2.4.3 Recorded files (activity image)

This image visualizes the number of recorded WAV files per 10-minute interval as differently colored circles. The larger a circle the more WAV files were recorded with the respective microphone channel in a 10-minute interval. Thereby, the x-axis represents the date and the y-axis depicts the respective daytime when files were recorded. By clicking on the respective entries in the figure legend under the graph, individual microphone channels can be hidden.

By applying this graphical evaluation tool, you can easily assess the quality of your recorded data. Recorded noise will be distributed equally over the whole day, for instance. In contrast, bat calls will be recorded mainly in times of twilight.

By specifying the geographical *<latitude>* and *<longitude>* of the recording location, the daily time of sunrise and sunset is determined and inserted into the graph.

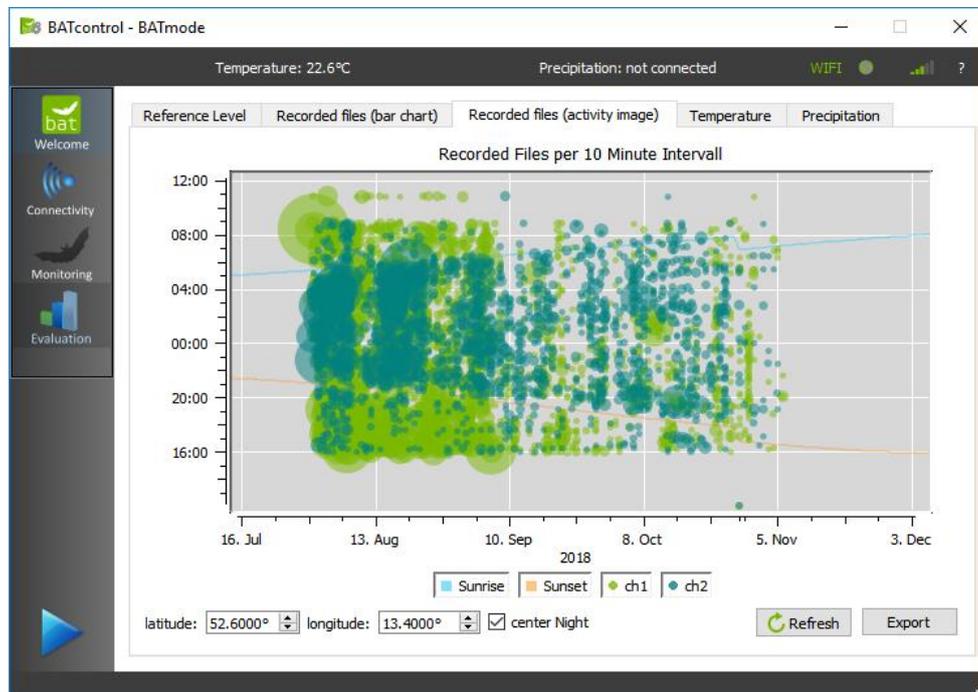


Figure 21: Evaluation Page - Activity Image

Use the check box *<center Night>* to center the graph to night or day times.

Since all WAV files in the monitoring directory are evaluated to create the plot, not only data from the current acoustical monitoring are incorporated in the figure. In addition, data from past monitorings may be shown in the plot, if data was not deleted.

If there are WAV files in the monitoring directory that have been recorded in different years, you can switch between the years by using the arrow buttons "*<*" and "*>*" next to the graph.

4.2.4.4 Temperature Values over Time (only relevant for BATmode 2S+)

This figure shows the logged temperature values over time.

Since the file "conditionlog.txt" in the monitoring directory is evaluated to create the plot, not only data from the current monitoring are incorporated in the figure. In addition, data from past monitorings may be shown in the plot, if data was not deleted.

4.2.4.5 *Precipitation Values over Time (only relevant for BATmode 2S+)*

This figure shows the logged precipitation values over time.

Since the file “conditionlog.txt” in the monitoring directory is evaluated to create the plot, not only data from the current monitoring are incorporated in the figure. In addition, data from past monitorings may be shown in the plot, if data was not deleted.

5 TECHNICAL DATA

5.1 BATmode 2S/2S+

5.1.1 Power supply

- 12-19 V DC ($\pm 10\%$), Connector: 5.5 mm/2.5 mm, max. current rating: 10 A

5.1.2 Heating output

- 19 V DC / 500 mA

5.1.3 SIM card slot

- Mini-SIM, often also called Classic-SIM or Standard-SIM (15 mm x 25 mm)

5.1.4 Temperature sensor input (exclusively BATmode 2S+)

- Sampling rate: 128 Hz
- Resolution: 12 bit
- Input impedance: 8 MOhm

5.1.5 Precipitation sensor input (exclusively BATmode 2S+)

- Shunt: 200 Ohm
- Sampling rate: 128 Hz
- Resolution: 12 bit
- Input impedance: 8 MOhm

5.1.6 Operation temperature:

- 0 – 40 °C

5.2 Cellular antenna with magnetic base (exclusively BATmode 2S)

- Frequency range: 850/900/1800/1900 MHz
- Gain: 2 dBi
- Cable length: 3 m
- Diameter of magnetic base: 32 mm
- Operation temperature: -10 – 55 °C

5.3 Antenna disc (exclusively BATmode 2S+)

- Operation temperature: -10 – 55 °C

5.3.1 WIFI antenna

- WLAN 802.11 a/b/g/n
- Gain: 5 – 7 dBi directional

5.3.2 Cellular antenna

- Frequency range: 791 – 960 MHz, 1710 – 2170 MHz, 2500 – 2700 MHz
- Gain: 2 – 3,5 dBi

5.3.3 Temperature Sensor

- Accuracy: ± 0.3 °C typical
- Local Sensor Accuracy (Max): : ± 2.7 °C

5.4 UltraSoundGate 116Hnbn or 416Hnbn Avisoft Bioacoustics (optionally)

- Sampling rate [kHz]: 50, 62.5, 75, 100, 125, 150, 166.6, 187.5, 214, 250, 300
- Resolution: 16 bit
- Type of converter: Delta-sigma-architecture with integrated adaptive anti-aliasing-filter
- Frequency response (-3dB): 20Hz – 135 kHz
- Input sensitivity: -9 dBV = -7 dBu = 0.35 Vrms
- Input impedance: 50 kOhm

5.5 Microphone disc GM50 (optionally)

- Operation temperature: -10 – 55 °C

5.5.1 Microphone

- Knowles Electronics FG-23629-P16
- Impedance: 4.4 kOhm
- Sensitivity: -53 dBA

5.5.2 Testsignal Speaker

- Sens Comp K Series 40KT08
- Center Frequency: 40 kHz \pm 3.0 kHz
- Bandwidth (-6dB): 1,5 kHz
- Total Beam Angle (-6 dB): 125° typical

5.6 Microphone disc GM90 (optionally)

- Operation temperature: -10 – 55 °C

5.6.1 Heating unit

- Input: 19V DC, max supply current: 130 mA
- Heating power: 2,5 W

5.6.2 Microphone

- Knowles Electronics FG-23629-P16
- Impedance: 4.4 kOhm
- Sensitivity: -53 dBA

5.6.3 Testsignal Speaker

- Sens Comp K Series 40KT08
- Center Frequency: 40 kHz \pm 3.0 kHz
- Bandwidth (-6dB): 1,5 kHz
- Total Beam Angle (-6 dB): 125° typical

5.7 Tower Microphone TM10 (optionally)

- Operation temperature: -10 – 55 °C
- Knowles Electronics FG-23629-P16
- Impedance: 4.4 kOhm
- Sensitivity: -53 dBA

5.8 Tower Microphone TM20 (optionally)

- Operation temperature: -10 – 55 °C

5.8.1 Microphone

- Knowles Electronics FG-23629-P16
- Impedance: 4.4 kOhm
- Sensitivity: -53 dBA

5.8.2 Testsignal Speaker

- Sens Comp K Series 40KT08
- Center Frequency: 40 kHz \pm 3.0 kHz
- Bandwidth (-6dB): 1,5 kHz
- Total Beam Angle (-6 dB): 125° typical



bat bioacoustictechnology GmbH
Hohe Straße 2
D-90610 Winkelhaid
www.bioacoustictechnology.de
info@bioacoustictechnology.de
+49 (0) 1522 / 1918574

© 2019 bat bioacoustictechnology GmbH
BATcontrol is based in part on the work
of the Qwt project (<http://qwt.sf.net>)

Product illustrations similar.
Misprints, errors, innovations
and changes reserved.