

WIFI-Antenna

MANUAL



bio
acoustic
technology

State: August 2019

1. Scope of delivery

- WIFI antenna Interline PANEL 19 (IP-G19-F5059-HV) incl. mounting kit
- WIFI USB Stick from Rotek Technology Co., Ltd. incl. driver CD
- Antenna cable N plug to RP-SMA plug, Length: 2m

2. Connection of the WIFI USB stick to your PC

1. Connect the WIFI USB stick to a free USB port of your PC or laptop.
2. The driver for the WIFI USB stick should be installed automatically. If not, you will find the driver on the supplied CD. In this case, please install the driver manually.
3. Please note that a possibly integrated WIFI module in your PC or laptop must be deactivated, so that a WIFI connection is actually taking place on the externally connected WIFI USB stick.

3. Connection and alignment of the WIFI antenna

1. Connect the cable of the WIFI antenna to the free antenna port of the WIFI USB stick.
2. Align the antenna so that it points in the direction of the antenna disk of the BATmode-System that is built in the wind turbine.

4. Connection with WIFI hotspot of the BATmode-System

Now you can connect with your BATmode-System by selecting the hotspot of your BATmode in the list of available networks (see also manual of your BATmode-System).