

The TM20 OVPbox (Over-Voltage-Protection Box) allows an Installation of the TM20 Microphones in Conformity with the Lightning Protection Zone Concept which demands an Installation of the Protective Device right next to the Microphone.

Properties:

Box Material: Powder-coated sheet steel

Connectors:

- Microphone Input: XLR 5pin male
- Microphone Output: XLR 5pin female

Ground Cable:

- Type: H07V-K 10mm²
- Length: 2m
- Termination: M8 Ring Lug


Overvoltage and Lightning Protection Modules:

- Blitzductor XT Modules from DEHN
- In Conformity with Lightning Protection Zone Concept at the Boundaries from 0_A – 2 and higher
- SPD Class: Type1 P1


Rating: IP65



Mounting:

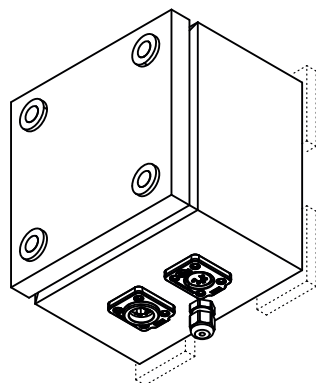- Mounting holes
- Magnets optionally available

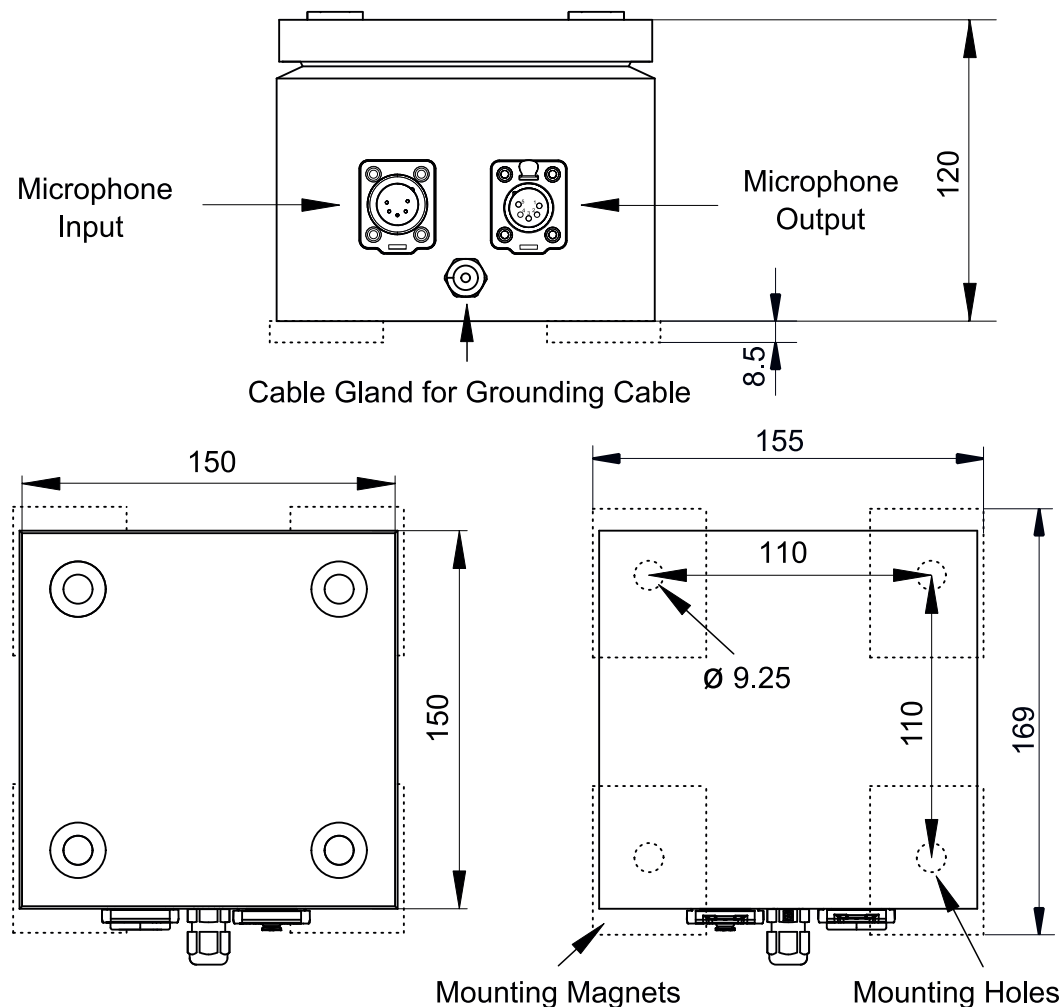

Dimensions in mm



DESIGNED BY: Florian Stiller		TM20 OVPbox		G	—		
DATE: 04.10.2024				F	—		
SIZE A4		 		E	—		
				D	—		
SCALE 1 : 3	WEIGHT (kg) 1.9 kg			DRAWING NUMBER 1.0		C	—
				SHEET N/A		B	—
						A	—
This drawing is our property; it can't be reproduced or communicated without our written consent.							